


DR[®] POWER GRADER

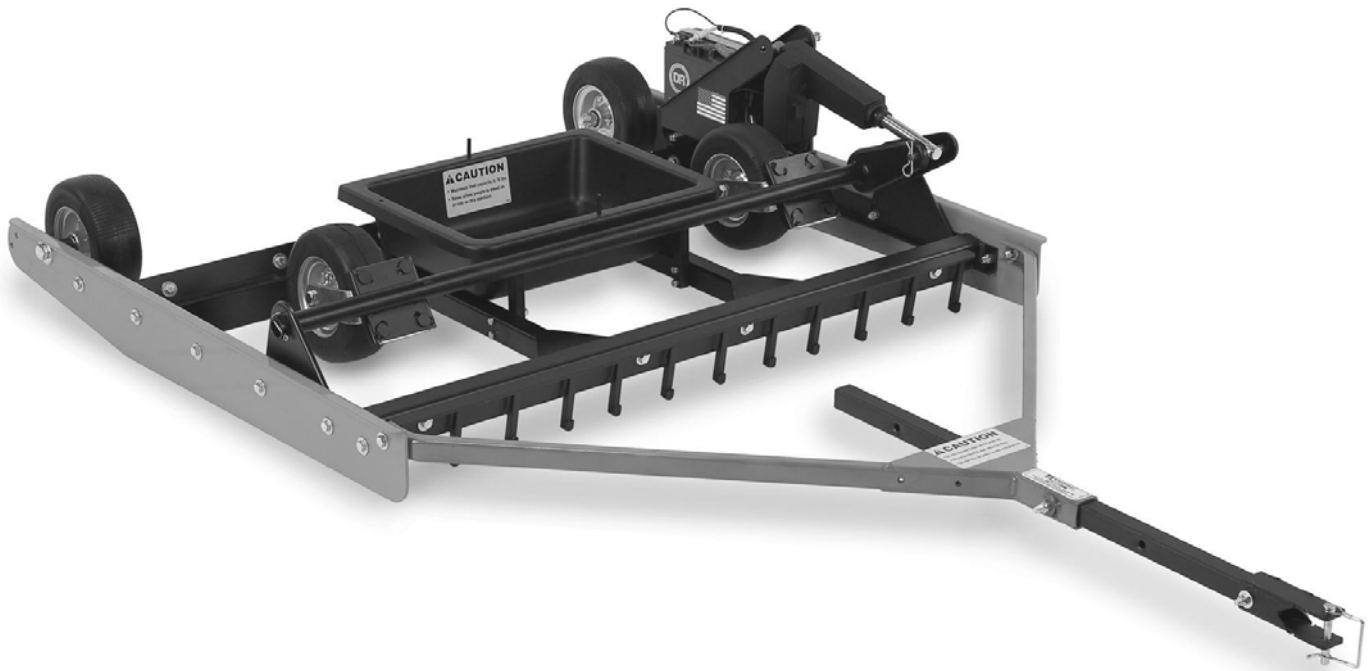

SAFETY & OPERATING INSTRUCTIONS



! WARNING!

READ AND UNDERSTAND THIS MANUAL AND ALL INSTRUCTIONS BEFORE OPERATING THIS GRADER.

Congratulations on your purchase of a new DR POWER GRADER!

We have done our utmost to ensure that your DR POWER GRADER will be one of the most trouble-free and satisfying pieces of equipment you have ever owned. Please let us know of any questions you may have. We want to answer them as quickly as possible. When you do call, please have your serial number or order number handy. **For technical assistance, please call Toll-Free 1-800-DR-OWNER (376-9637) and one of our Technical Support Representatives will be happy to help you.** We also hope to hear from you on how much you like your new helper.

In addition, please tell your friends about your new DR POWER GRADER! Having DR Owners spread the word about our products and our way of doing business is the best advertising we can have, and the best way to help us provide even better service in the years to come.

Thanks once again!



for all of us at
Country Home Products, Inc.

SALES MANAGER

COPYRIGHT

©2007 Country Home Products, Inc. All rights reserved.



DR® Power Equipment
A division of Country Home Products®
127 Meigs Road
Vergennes, VT 05491

Toll-Free phone: 1-800-DR-OWNER (376-9637)

Fax: 1-802-877-1213

Web site: www.dr-owner.com

Table of Contents

CHAPTER 1.....	1
INTRODUCING THE DR POWER GRADER	1
Conventions used in this manual	1
CHAPTER 2.....	3
GENERAL SAFETY RULES.....	3
Labels	3
Protecting Yourself and Those Around You	4
Operating the DR POWER GRADER Safely	4
Safety for Children	5
Safety with Electric-Powered Machines	5
Handling the Battery Safely	6
Safely Charging the Battery	6
Additional Information and Potential Changes.....	7
CHAPTER 3.....	9
SETTING UP YOUR DR POWER GRADER.....	9
DR POWER GRADER Controls and Features	9
Unpacking the DR POWER GRADER.....	10
Parts Checklist	11
Assembling the DR POWER GRADER	13
Installing the Battery/Clevis Base Assembly and Linear Actuator	13
Attaching the Yoke.....	15
Charging the Battery	16
About the Battery	16
Linking the Transmitter and Receiver	18
Replacing the Transmitter Battery.....	18
Installing the Scarifying Teeth Plate.....	19
Connecting the DR POWER GRADER to your Tow Vehicle	20
CHAPTER 4.....	21
OPERATING YOUR DR POWER GRADER	21
Operating Safety	21
Understanding the Height Adjustment Remote Control Transmitter.....	21
Operating Parameters	22
Operating Tips	23
FAQs.....	24
Optional Drag Screen	24
CHAPTER 5.....	25
MAINTAINING THE DR POWER GRADER	25
Regular Maintenance Check:.....	25
Caring for the Battery.....	26
Recycling a Used Battery	26
Replacing the Scarifying Teeth Plate	27
Lubrication	28
End of Season and Storage	28
CHAPTER 6.....	29
TROUBLESHOOTING.....	29
Troubleshooting Table.....	29

CHAPTER 7.....	30
PARTS LIST, SCHEMATIC DIAGRAM AND WARRANTY	30
Parts List - DR POWER GRADER Frame Assembly.....	30
Schematic - DR POWER GRADER Frame Assembly.....	31
Parts List - DR POWER GRADER Yoke Assembly.....	32
Schematic - DR POWER GRADER Yoke Assembly.....	33
Parts List - DR POWER GRADER Optional Drag Screen (Kit No. 210861).....	34
Schematic - DR POWER GRADER Optional Drag Screen.....	34
Warranty.....	35

INTRODUCING THE DR POWER GRADER

This manual will help you set up and safely operate your new DR POWER GRADER. Careful adherence to the safety and operating instructions in this manual will ensure many years of productive use. Please let us know of any questions you may have. We want to answer them as quickly as possible. When you do call, please have your serial number and/or order number handy. **For technical assistance, please call Toll-Free 1-800-DR-OWNER (376-9637) and one of our Technical Support Representatives will be happy to help you.**

Conventions used in this manual

WARNING!

THIS INDICATES A HAZARDOUS SITUATION, WHICH, IF NOT AVOIDED, COULD RESULT IN DEATH OR SERIOUS INJURY.

CAUTION!

THIS INDICATES A HAZARDOUS SITUATION, WHICH, IF NOT AVOIDED, COULD RESULT IN MINOR OR MODERATE INJURY.

NOTICE!

THIS INFORMATION IS IMPORTANT IN THE PROPER USE OF YOUR MACHINE. FAILURE TO FOLLOW THIS INSTRUCTION COULD RESULT IN DAMAGE TO YOUR MACHINE OR PROPERTY.

Tip: This is a helpful hint to guide you in getting the most out of your DR POWER GRADER.

Tools Needed: This indicates you will need a special tool to perform a maintenance function on your DR POWER GRADER.

NOTE: *This information may be helpful to you.*

If you are ever unsure about an action you are about to take, don't do it. Contact Country Home Products' Toll-Free support at 1-800-DR-OWNER (376-9637) for help or information.


GENERAL SAFETY RULES

WARNING!

READ THIS *SAFETY & OPERATING INSTRUCTIONS* MANUAL BEFORE YOU USE THE DR POWER GRADER. BECOME FAMILIAR WITH THE SERVICE RECOMMENDATIONS TO ENSURE THE BEST PERFORMANCE FROM YOUR POWER GRADER.

Labels

Your DR POWER GRADER carries prominent labels as reminders for its proper and safe use. Shown below are copies of all the labels that appear on the equipment. Take a moment to study them and make a note of their location on your DR POWER GRADER as you assemble and *before* you operate the machine. Replace damaged or missing safety and information labels immediately.

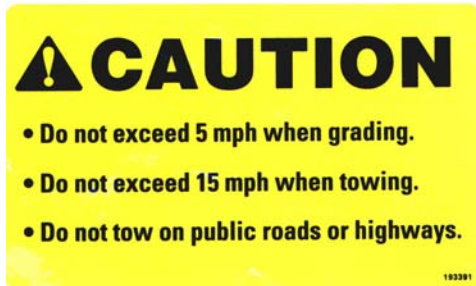


#193391



#193481



#214191

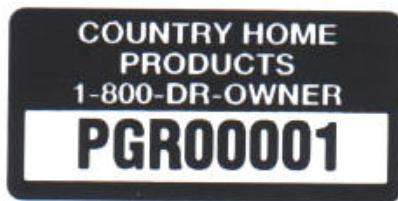

#193401



#192391

Protecting Yourself and Those Around You

WARNING!

ALWAYS TAKE THE FOLLOWING PRECAUTIONS WHEN OPERATING THIS GRADER:

- ALWAYS WEAR PROTECTIVE GOGGLES OR SAFETY GLASSES WITH SIDE SHIELDS WHILE GRADING TO PROTECT YOUR EYES FROM POSSIBLE THROWN BITS OF DIRT OR GRAVEL.
 - WEAR SHOES WITH NON-SLIP TREADS WHEN USING YOUR DR POWER GRADER. IF YOU HAVE SAFETY SHOES, WE RECOMMEND WEARING THEM. DO NOT USE THE GRADER WHILE BAREFOOT OR WEARING OPEN SANDALS.
 - WEAR A HELMET WHEN OPERATING AN ATV.
-

Operating the DR POWER GRADER Safely

WARNING!

YOU MUST OPERATE THE POWER GRADER SAFELY. UNSAFE OPERATION CAN CREATE A NUMBER OF HAZARDS FOR YOU. ALWAYS TAKE THE FOLLOWING PRECAUTIONS WHEN USING THIS GRADER:

- READ, UNDERSTAND, AND FOLLOW ALL INSTRUCTIONS IN THIS MANUAL. BE THOROUGHLY FAMILIAR WITH THE CONTROLS AND THE PROPER USE OF YOUR GRADER BEFORE USING.
 - THOROUGHLY INSPECT THE AREA WHERE YOUR GRADER WILL BE USED, AND REMOVE ALL STONES, STICKS, WIRE, PET SUPPLIES, OR LAWN TOYS, AND ANY OTHER FOREIGN OBJECTS THAT YOU COULD RUN OVER. ALSO, NOTE THE LOCATION OF STUMPS, AND OTHER POSSIBLE HAZARDS THAT YOU SHOULD AVOID DURING OPERATION.
 - WATCH FOR TRAFFIC WHEN OPERATING IN OR NEAR ROADWAYS. PAY EXTRA ATTENTION WHEN OPERATING NEAR PUBLIC ROADWAYS.
 - WHEN OPERATING IN A ROADWAY, WE SUGGEST THAT YOU PUT OUT OBSTRUCTIONS (MARKER CONES OR PAILS) TO DIVERT ANY TRAFFIC AWAY FROM YOUR WORK AREA.
 - BE AWARE OF YOUR SURROUNDINGS WHEN OPERATING THE DR POWER GRADER, E.G. DITCHES, CULVERTS, DROP-OFFS, AND HILLS.
 - NEVER ALLOW PEOPLE WHO ARE UNFAMILIAR WITH THESE INSTRUCTIONS TO USE THE DR POWER GRADER.
 - TO BE SAFE, DO NOT OPERATE THE GRADER NEAR SMALL CHILDREN OR PETS, AND NEVER ALLOW CHILDREN TO OPERATE THE POWER GRADER. STOP THE GRADING ACTION WHEN ANOTHER PERSON OR PET APPROACHES.
 - DO NOT ALLOW PEOPLE TO RIDE ON THE GRADER.
 - IF YOU HAVE TO STOP TO REMOVE ANY DEBRIS FROM THE GRADER, ALWAYS SHUT OFF THE TOW VEHICLE'S ENGINE AND SET THE PARKING BRAKE.
 - DO NOT, UNDER ANY CONDITIONS, REMOVE, BEND, CUT, FIT, WELD, OR OTHERWISE ALTER STANDARD PARTS ON THE DR POWER GRADER. MODIFICATIONS TO YOUR MACHINE COULD CAUSE PERSONAL INJURIES AND WILL VOID YOUR WARRANTY.
 - WHILE USING THE DR POWER GRADER, DON'T HURRY OR TAKE THINGS FOR GRANTED.
 - DO NOT OPERATE THE GRADER WHEN UNDER THE INFLUENCE OF ALCOHOL OR MEDICATION.
 - USE THE DR POWER GRADER ONLY IN DAYLIGHT OR GOOD ARTIFICIAL LIGHT.
-

Safety for Children

WARNING!

TRAGIC ACCIDENTS CAN OCCUR IF THE OPERATOR IS NOT ALERT TO THE PRESENCE OF CHILDREN. CHILDREN ARE OFTEN ATTRACTED TO THE GRADING ACTIVITY. *NEVER ASSUME THAT CHILDREN WILL REMAIN WHERE YOU LAST SAW THEM.*

- KEEP CHILDREN OUT OF THE GRADING AREA AND UNDER THE WATCHFUL CARE OF A RESPONSIBLE ADULT.
 - BE ALERT, STOP AND TURN THE TOW VEHICLE OFF IF CHILDREN ENTER THE WORK AREA.
 - NEVER ALLOW CHILDREN TO OPERATE THE DR POWER GRADER.
 - NEVER ALLOW CHILDREN TO RIDE ON THE TOW VEHICLE OR THE DR POWER GRADER.
-

Safety with Electric-Powered Machines

WARNING!

NEVER OVERLOOK THE HAZARDS OF ELECTRICITY. ALWAYS FOLLOW THESE PRECAUTIONS:

- NEVER ATTEMPT TO OPEN THE MOTOR ASSEMBLY. NEVER ATTEMPT ANY ELECTRICAL REPAIRS YOURSELF. IF IN DOUBT, CONSULT A QUALIFIED ELECTRICIAN OR CONTACT COUNTRY HOME PRODUCTS' TOLL-FREE SUPPORT AT 1-800-DR-OWNER (376-9637) FOR HELP OR INFORMATION.
 - NEVER OPERATE YOUR GRADER IN THE RAIN OR IN WET CONDITIONS. REMEMBER, THIS IS AN ELECTRIC GRADER.
 - NEVER TAMPER WITH SAFETY DEVICES. CHECK THEIR PROPER OPERATION REGULARLY.
-

Tip: Reference page 29 for troubleshooting tips.

Handling the Battery Safely

WARNING!

- **USE ONLY THE 12-VOLT, LEAD-ACID, RECHARGEABLE BATTERY, AND THE 12-VOLT BATTERY CHARGER THAT SHIPPED WITH YOUR GRADER, OR THEIR COUNTRY HOME PRODUCTS REPLACEMENT. USING THE WRONG TYPE OF BATTERY OR A CHARGER, OTHER THAN THE COUNTRY HOME PRODUCTS CHARGER, COULD CAUSE A FIRE OR EXPLOSION RESULTING IN SERIOUS INJURY.**
 - **NEVER LIFT OR CARRY THE BATTERY BY THE WIRES OR CONNECTORS. THIS CAN DAMAGE THE BATTERY AND POSSIBLY CAUSE A FIRE RESULTING IN SERIOUS INJURY. LIFT AND CARRY THE BATTERY BY THE CASE ONLY.**
-

Only adults should handle the battery. The battery is heavy and contains sulfuric acid (electrolyte). Dropping the battery could result in serious injury. Get a firm grip and use caution when removing or changing the battery.

- Examine the charger and the connectors for excessive wear or damage each time you charge the battery. If you determine there is a problem, do not use the charger or the battery until you have replaced the worn or damaged part.
- Batteries contain sulfuric acid. To prevent burns, avoid contact with skin, eyes, and clothing. To prevent fire or explosion keep sparks and open flames away from the battery.
- Exercise care in handling the battery in order not to short-circuit it with conducting materials such as rings, bracelets, and keys. When short-circuited, the battery or conductor may overheat and cause burns.
- Never throw away used batteries in your household trash. Bring them to a recycling center or household hazardous waste depot for proper disposal. Please refer to “Recycling a Used Battery”, on page 28, for more information.

NOTICE!

PLEASE DISPOSE OF USED BATTERIES RESPONSIBLY, ACCORDING TO YOUR LOCAL HAZARDOUS MATERIALS REGULATIONS.

Safely Charging the Battery

- Charge the battery before using your DR POWER GRADER. See “Charging the Battery” on page 17 and “Caring for the Battery” on page 28.
- Never allow the battery to completely discharge; charge the battery before this happens.
- Charge the battery before storing your DR POWER GRADER. Do not leave the battery discharged, as this can ruin it.
- Never allow children to charge the battery. The electricity involved in charging the battery could injure a child.
- NEVER charge the battery in the rain or in wet locations.

! CAUTION!

THE DR POWER GRADER MUST BE OPERATED SAFELY TO PREVENT OR MINIMIZE THE RISK OF MINOR OR MODERATE INJURY. UNSAFE OPERATION CAN CREATE A NUMBER OF HAZARDS FOR YOU. ALWAYS TAKE THE FOLLOWING PRECAUTIONS WHEN OPERATING THIS POWER GRADER:

- KEEP IN MIND THAT THE OPERATOR OR USER IS RESPONSIBLE FOR ACCIDENTS OR HAZARDS OCCURRING TO OTHER PEOPLE, THEIR PROPERTY, AND THEMSELVES.
 - DO NOT USE THE DR POWER GRADER TO DRAG, TOW, OR CARRY ITEMS.
 - NEVER OPERATE THE DR POWER GRADER WITH A TRUCK (2WD OR 4WD); DOING SO WILL VOID THE DR POWER GRADER WARRANTY.
 - NEVER LEAVE THE DR POWER GRADER UNATTENDED. IF YOU LEAVE THE AREA, SHUT OFF THE TOW VEHICLE, AND REMOVE THE KEY.
 - ALWAYS CHECK THE ALIGNMENT OF MOVING PARTS AND FOR DAMAGED OR WORN PARTS.
 - KEEP ALL NUTS AND BOLTS TIGHT AND KEEP THE EQUIPMENT AND ATTACHMENTS IN GOOD OPERATING CONDITION.
 - USE ONLY MANUFACTURER-RECOMMENDED REPLACEMENT PARTS.
 - SEE MANUFACTURER'S INSTRUCTIONS FOR PROPER OPERATION AND INSTALLATION OF ACCESSORIES. ONLY USE ACCESSORIES APPROVED BY MANUFACTURER.
 - DO NOT USE THE DR POWER GRADER IN A MANNER NOT IN ACCORDANCE WITH THESE INSTRUCTIONS.
 - NO LIST OF WARNINGS AND CAUTIONS CAN BE ALL-INCLUSIVE. IF SITUATIONS OCCUR THAT ARE NOT COVERED BY THIS MANUAL, THE OPERATOR MUST APPLY COMMON SENSE AND OPERATE THE DR POWER GRADER IN A SAFE MANNER. CALL 1-800-DR-OWNER (376-9637) FOR ASSISTANCE.
-


Additional Information and Potential Changes

Country Home Products, Inc. reserves the right to discontinue, change, and improve its products at any time without notice or obligation to the purchaser. The descriptions and specifications contained in this manual were in effect at printing. Equipment described within this manual may be optional. Some illustrations may not be applicable to your machine.

SETTING UP YOUR DR POWER GRADER

This chapter outlines a few simple steps you will need to follow to set up your new machine before you use it. It may be helpful to familiarize yourself with the controls and features on your new DR POWER GRADER by reviewing **Figure 1** before beginning the steps outlined in this chapter. **If you have any questions at all, please feel free to contact our Customer Service Representatives at our Toll-Free number: 1-800-DR-OWNER (376-9637).**

DR POWER GRADER Controls and Features

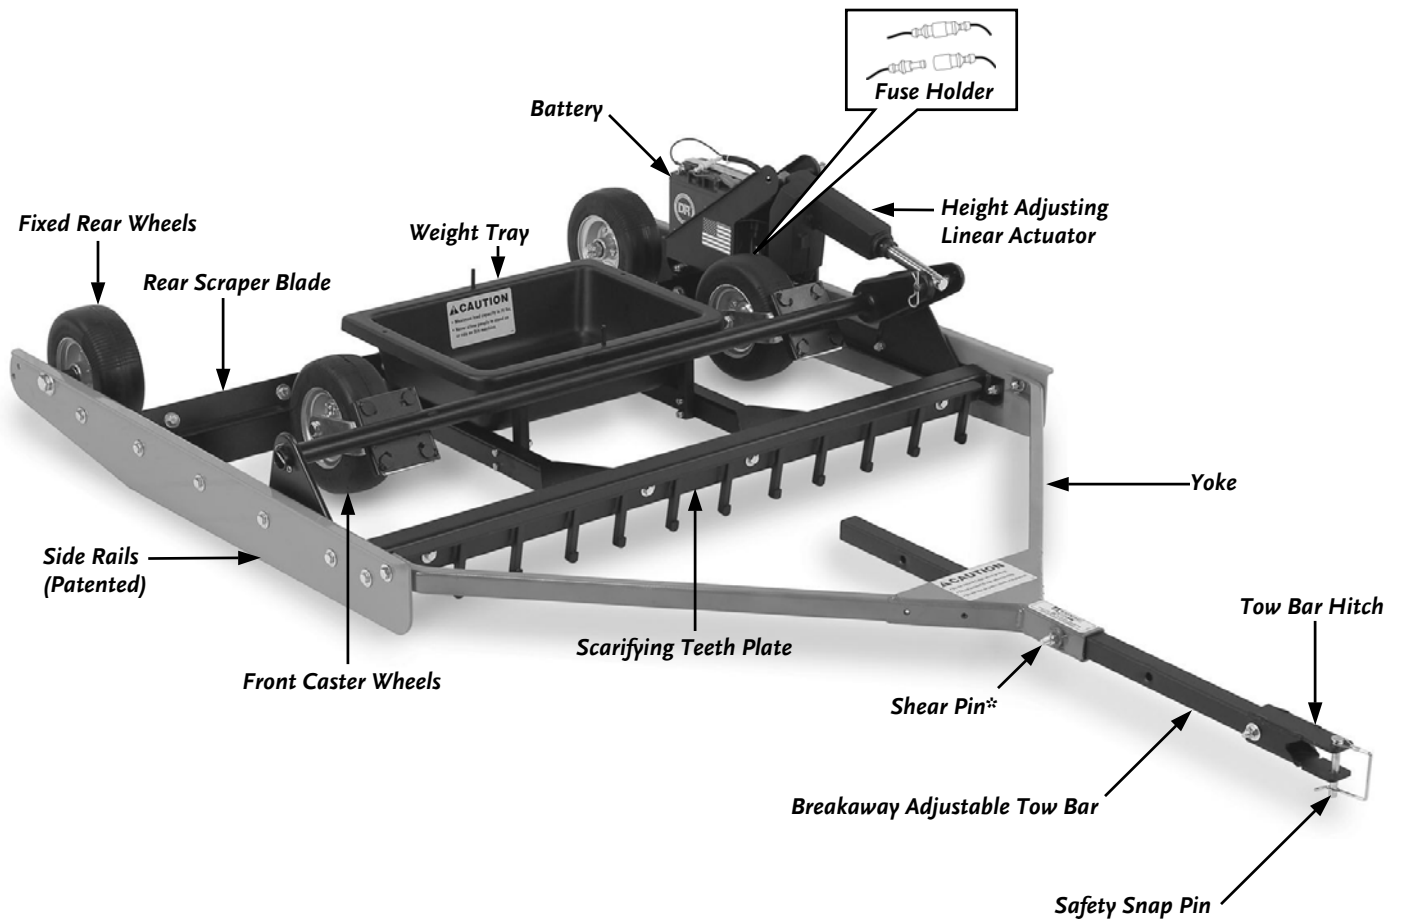

***There are two (2) extra Shear Pins provided. Keep one with you while grading.**

Figure 1

Unpacking the DR POWER GRADER

NOTE: Unpacking the DR POWER GRADER is a two-person job. We recommend you have an extra set of hands available before you begin, as the DR POWER GRADER weighs about 230 lbs.

Tools Required:


- Metal Shears (Side Cutters)
- Knife
- Eye Protection
- 9/16" Wrench
- Claw Hammer

! CAUTION!

WEAR EYE PROTECTION WHEN CUTTING THE BANDING. THE BANDING MAY HAVE A LOT OF TENSION ON IT AND MAY SNAP AND CUT YOU. ALWAYS STAND TO ONE SIDE WHEN CUTTING THE BAND.

1. Place the carton near a flat surface large enough to hold the uncrated DR POWER GRADER.
2. Stand to one side and cut the banding around the shipping carton, and then remove the top of the carton.
3. Cut the ties on the Yoke Assembly and remove the Yoke.
4. Cut the ties and remove the Tow Bar.
5. Remove the Battery/Clevis Assembly from the Weight Tray.
6. Using a Claw Hammer, remove the two (2) Pallet Blocks in front of the Rear Wheels (**Figure 2**).
7. For now, leave the DR POWER GRADER on the shipping pallet for ease of assembly.
8. Check the parts supplied against the Parts Checklist on the next page. Most of the assembly hardware is loosely assembled to the frame and major components.

NOTE: Do not discard the packaging material until you are fully satisfied with your new machine.

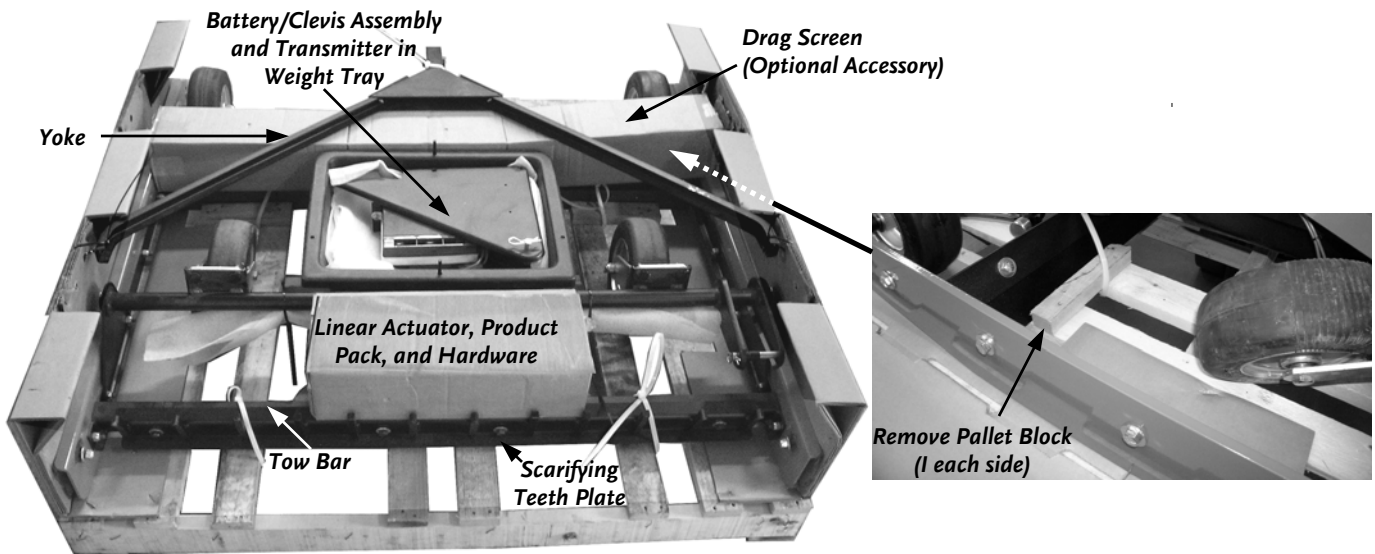

Parts Checklist

Country Home Products ships the following items with your new DR POWER GRADER. Please check to make sure you have everything listed below. If you are missing any of these items, please call Customer Service Toll-Free **1-800-DR-OWNER (376-9637)** for assistance.

Parts in Carton:

- DR POWER GRADER
- Yoke Assembly
- Tow Bar
- Battery/Clevis Base Assembly, Clevis Pin, Spacers, Hitch Clip and Remote Control Transmitter w/Lanyard
- Small Parts Box containing:
 - Product Pack
 - Linear Actuator
 - Battery Charger Kit (Adapter w/Alligator Clips)
 - Keyhole Hitch
 - Tow Hitch
 - (1) Safety Snap Pin w/Safety Hitch Clip
 - (2) Shear Pin, 3/8"-16
 - (2) Nylon Lock Nut, 3/8"-16
 - (1) Wire Tie, 7", Black
 - *Safety & Operating Instructions Manual*

Assembly Hardware (Not shown to Scale)

✦ = Included in Small Parts Box

Nuts



110731 1/4-20
Nylon Lock Nut



110761 5/16-18
Nylon Lock Nut



✦ 110751 3/8-16
Nylon Lock Nut



160071 5/8-18
Nylon Lock Nut

Bolts



✦ 191871 3/8-16 Shear Bolt



191741 5/8-18 x 1-1/4 Bolt



180851 1/4-20 x 2-3/4" Bolt



150431 3/8-16 x 1-1/4 Bolt

Washers




112411 5/16"
Flat Washer



112391 3/8"
Flat Washer

Plns

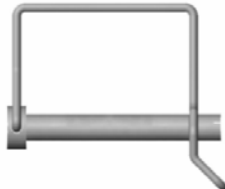

✦ 211551 Safety Snap Pin



211541 1/2 x 3-1/2 "
Clevis Pin



160031 Hitch Clip for 1/2" Shaft

Assembling the DR POWER GRADER

Tools Needed:

- (2) 9/16" Wrench or Socket
- 5/16" Wrench or Socket
- Cutting Pliers or Knife

Installing the Battery/Clevis Base Assembly and Linear Actuator

1. Remove the Battery/Clevis Base Assembly and Transmitter from the Weight Tray. Remove the Linear Actuator from the Parts Box.
2. Using two (2) 9/16" Wrenches, remove the three (3) Mounting Bolts, Washers and Lock Nuts (**Figure 3**) from the Left Rear Side Frame.
3. Place the Clevis Base/Battery Assembly on the Left Side Rail (**Figure 3**) and align the Assembly's Mounting Holes with Holes on the Frame.
4. Using two (2) 9/16" Wrenches, bolt the Battery/Clevis Base Assembly to the Left Side Rail with the three (3) 3/8"-16 x 1-1/2" Bolts, 3/8" Flat Washers and 3/8" Nylon Lock Nuts (**Figure 3**). Tighten all Bolts securely.
5. Remove the Hitch Clip, Clevis Pin, and the two (2) Spacers assembled in the Battery/Clevis Base Assembly (**Figure 4**).
6. Locate the Linear Actuator, and with the Motor facing down, insert the rear of the Actuator into the Battery/Clevis Base Assembly and reinsert the Spacers, Clevis Pin, and Hitch Clip (**Figure 4**).

NOTE: The Spacers go on either side of the Actuator (**Figure 4**).

7. Connect the Linear Actuator and the Receiver connectors together (**Figure 5**).
8. Using a 5/16" Wrench or Socket, connect the Positive Battery wire (red), tighten securely, and install the Protective Cap (**Figure 5**).
9. Install the Negative Battery Wire (black) and only hand tighten at this time (**Figure 5**).

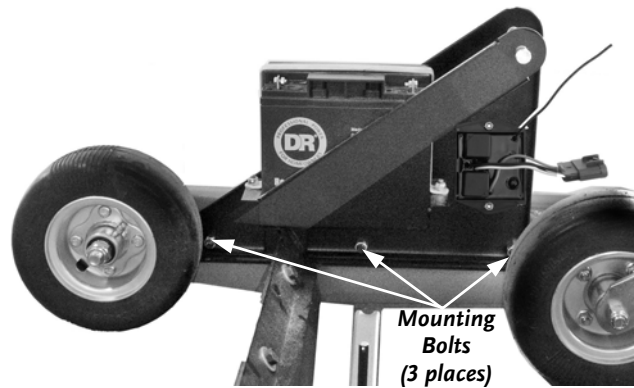


Figure 3

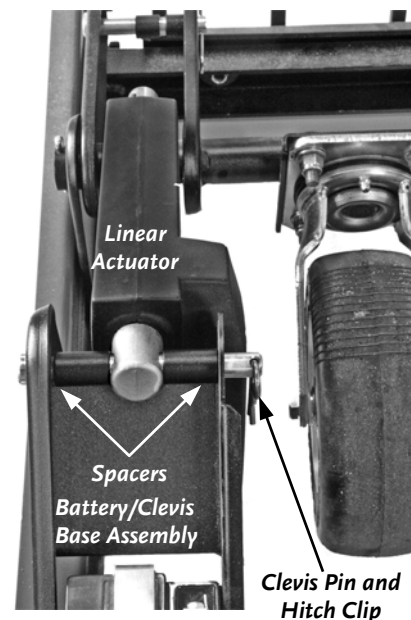


Figure 4

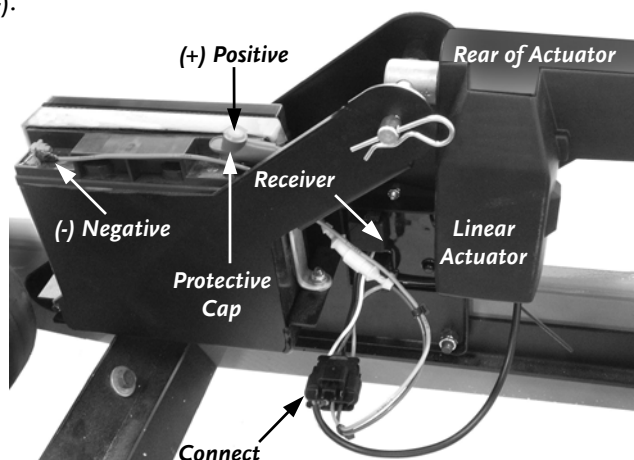


Figure 5

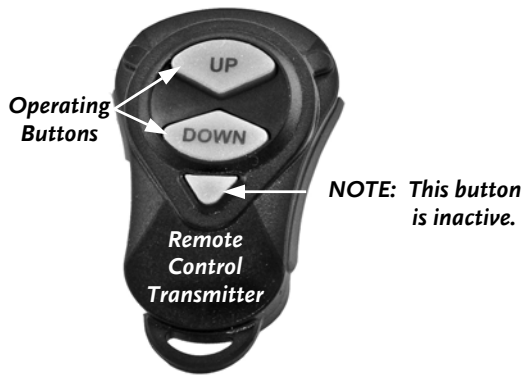


Figure 6

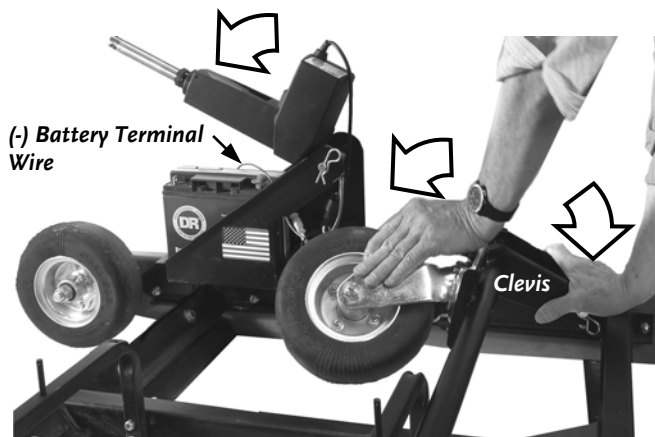


Figure 7a

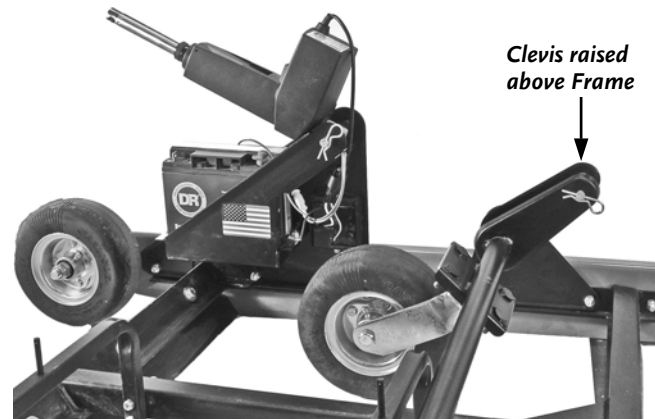


Figure 7b



Figure 8

10. Press the Remote Control Transmitter Operating Buttons (**Figure 6**) to see if the Transmitter operates the Actuator properly. UP should retract the Actuator Arm and DOWN should extend the Actuator Arm. If it functions correctly, extend the Actuator Arm and disconnect the Negative Battery Terminal Wire (**Figure 7a**), keeping it away from the Terminal.

NOTE: If the Transmitter does not operate the Actuator, refer to the instructions on page 18 for linking the Actuator Receiver.

11. Rotate the Linear Actuator up and to the rear, leaving it in this position (**Figure 7a**).

12. Press down on the Clevis (**Figure 7a**) to raise the Casters. Rotate both Casters 180° and release the Clevis. The Clevis will then rise above the Frame for attachment of the Linear Actuator Arm (**Figure 7b**).

13. Rotate the Actuator Arm forward and rest it on the Clevis Pin in the Axle Clevis (**Figure 8**).

14. Re-connect the Negative Battery Terminal Wire. Using the Transmitter, adjust the Actuator Arm length to align the Hole in the Actuator Arm with the Clevis Pin in the Axle Clevis (**Figure 8**).

! CAUTION!

AT THIS TIME, DISCONNECT THE NEGATIVE WIRE TO PREVENT ACCIDENTAL MOTOR ACTUATION.

15. Remove the Hitch Clip, Clevis Pin, and the two (2) Spacers from the Axle Clevis (**Figure 8**). Align the Actuator Arm and re-insert the Clevis Pin with the Spacers on either side of the Actuator Arm. Secure the Clevis Pin in place with the Hitch Clip.

16. Re-connect the Negative Battery Terminal Wire and tighten securely. Secure the wires to the Battery Strap (**Figures 9a & 9b** on page 15) using the Wire Tie included in the Parts Package.

17. Using the Transmitter, press UP to raise the DR POWER GRADER, which lowers the wheels.

18. With the help of another person, you can now roll the DR POWER GRADER off the shipping pallet.

NOTE: You must now fully charge the Battery before using your new DR POWER GRADER. See page 16.

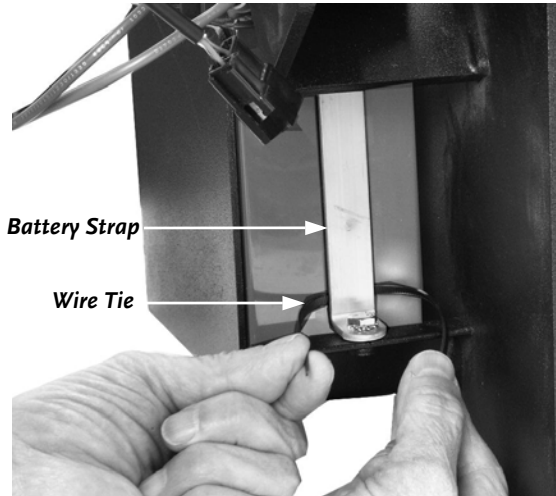


Figure 9a

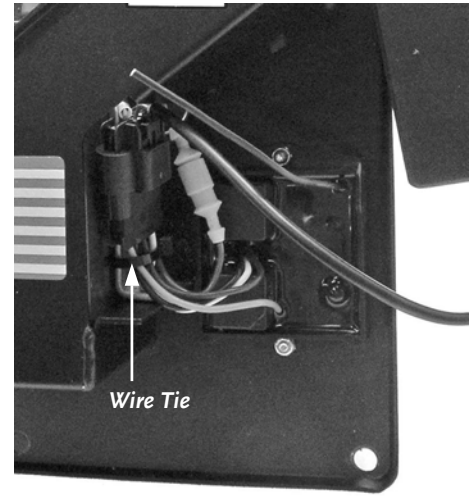


Figure 9b

Attaching the Yoke

Tool Needed:

- (2) 9/16" Wrench

1. Position the Yoke in front of the DR POWER GRADER and inside of the Side Rails (**Figure 10**).
2. Align the Holes in the end of the Yoke with the Holes in the Side Rails and attach each side of the Yoke to the Side Rails using a 3/8"-16 x 1-1/2" Bolt, 3/8" Flat Washer and 3/8" Lock Nut (**Figure 10**). Do not tighten at this time

NOTE: To allow the Yoke to pivot up and down, DO NOT fully tighten the Lock Nut against the hardware. Back the Lock Nut off 1/4 to 1/2 turn after contact with the hardware.

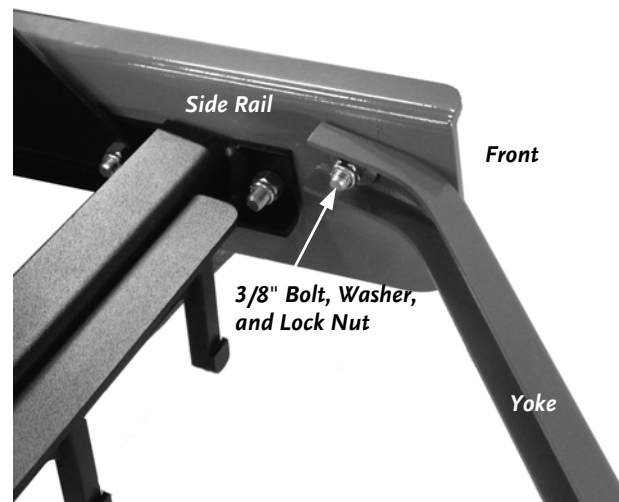


Figure 10

Charging the Battery



WARNING!

ELECTRICAL HAZARD: PREVENT FIRE

- NEVER MODIFY YOUR GRADER'S ELECTRICAL SYSTEM. MODIFICATIONS COULD RUIN THE ELECTRICAL SYSTEM AS WELL AS CAUSE A FIRE, RESULTING IN SERIOUS INJURY.
- USING ELECTRICAL COMPONENTS OTHER THAN THOSE SUPPLIED WITH YOUR GRADER COULD CAUSE THE ELECTRICAL SYSTEM TO OVERHEAT, EXPLODE, OR START A FIRE.
- ONLY ADULTS SHOULD HANDLE THE BATTERY, IT CONTAINS SULFURIC ACID (AN ELECTROLYTE). THE BATTERY IS HEAVY; DROPPING IT COULD RESULT IN SERIOUS INJURY.
- NEVER LIFT OR CARRY THE BATTERY BY THE CABLES OR TERMINALS. THIS CAN DAMAGE THE BATTERY AND POSSIBLY START A FIRE, RESULTING IN SERIOUS INJURY. LIFT AND CARRY THE BATTERY ONLY BY ITS CASE.
- DO NOT SHORT CIRCUIT THE BATTERY.
- READ THE SAFETY INSTRUCTIONS ON THE BATTERY.

About the Battery

The DR POWER GRADER comes with a 12-Volt, maintenance-free, rechargeable, sealed lead acid battery. A fully charged battery runs about 20 hours or 800 up/down cycles. Properly maintained and charged, the battery provides years of dependable service.

Charging the Battery



WARNING!

ELECTRICAL HAZARD: PREVENT FIRE

- USING THE WRONG TYPE OF BATTERY OR CHARGER COULD CAUSE A FIRE OR EXPLOSION, RESULTING IN SERIOUS INJURY.
- NEVER ALLOW CHILDREN TO CHARGE THE BATTERY. THE ELECTRICITY INVOLVED IN CHARGING THE BATTERY COULD INJURE A CHILD.
- EXAMINE THE CHARGER, ITS CONNECTORS, AND THE BATTERY FOR EXCESSIVE WEAR OR DAMAGE EACH TIME YOU CHARGE THE BATTERY. IF YOU SEE ANY EXCESSIVE WEAR OR DAMAGE, DO NOT USE THE CHARGER OR THE BATTERY, REPLACE THEM.
- USE ONLY THE 12-VOLT CHARGER SUPPLIED WITH YOUR GRADER TO CHARGE THE BATTERY.
- USE THE CHARGER ONLY IN DRY LOCATIONS. AVOID CONTACT WITH WATER.

Charging the Battery is a simple process. Leave the Battery in your DR POWER GRADER when you charge it.

1. Attach the Black (-) alligator clipped wire from the Charger Adapter to the (-) terminal of the Battery, then attach the Red (+) alligator clipped wire to the (+) Battery terminal.
 2. Plug the Charger into a standard wall outlet.
- Every time you finish using your DR POWER GRADER, recharge the Battery. The time it takes to recharge the Battery depends on how drained it is when you start. Charging the Battery typically takes 6 to 8 hours if charged after each use. However, charging may take 24 to 48 hours if you allow the Battery to run down before it is charged. The Battery does not have a “memory” so don’t worry about overcharging the Battery or charging it too often.
 - You can charge the Battery hundreds of times. The Battery lasts longer if you charge it before it is fully drained. Keep it fully charged and at room temperature when not using your DR POWER GRADER.
 - Once the Battery is charged, pull the plug from the wall outlet and then remove the Charger from your Battery. However, you can leave your Battery plugged in and charging for an extended period.
 - Store the Charger in its self-locking plastic shipping bag. Keep the charger in a dry location.
 - If the Battery does not hold its charge for very long under normal conditions or it simply won’t hold a charge, then replace it. You can purchase a replacement Battery directly from us. To install your new Battery, remove the Battery Cover, detach the cables and remove the dead Battery, next install the new Battery and attach the cables, then replace the Battery Cover. Refer to the assembly instructions for more details on page 13.

 **NOTICE!**

WHEN THE BATTERY GETS OLD AND NO LONGER ACCEPTS A CHARGE, REMOVE IT FROM YOUR GRADER. NEVER LEAVE A DEAD BATTERY IN YOUR GRADER.

Linking the Transmitter and Receiver

With a newly arrived DR POWER GRADER, the Transmitter and Receiver are already linked together and should work upon a press of a Button. If you happen to lose your Transmitter and have to get a replacement, you will have to perform the following steps to link a new Transmitter to your Receiver.

! CAUTION!

DO NOT ALLOW OTHERS NEAR THE UNIT WHEN CONNECTING POWER TO THE RECEIVER. KEEP HANDS AND FEET AWAY FROM ALL MOVING PARTS; THE ACTUATOR ARM MAY MOVE. KEEP THE TRANSMITTER SECURE AT ALL TIMES DURING THIS PROCEDURE, AND DURING ACTUAL USE TO PREVENT UNINTENDED ACTIVATION.

1. Remove power from the Receiver by separating the Fuse Holder (*Figure 1* on page 9).
2. Remove the Hitch Clip, Clevis Pin, and Spacers from the Axle Clevis (*Figure 8* on page 14).
3. Press any Button on the Transmitter and hold it down.
4. Apply power to the Receiver by re-connecting the Fuse Holder.
5. The Transmitter and Receiver are now linked together.
6. Using the Transmitter, align the Hole in the Actuator Arm with the Holes in the Axle Clevis and re-insert the Spacers, Clevis Pin, and Hitch Clip.

Replacing the Transmitter Battery

To replace the Transmitter Battery, remove the Screws in the Case (*Figure 11*), and replace the Battery with a CR2032, 3V, Coin Cell Battery.



Figure 11

Installing the Scarifying Teeth Plate

The Scarifying Teeth Plate was placed upside down for shipping. The following procedure is for installing the Scarifying Teeth Plate.

Tool Needed:

- (2) 9/16" Wrench

1. Use the Linear Actuator to raise the front of the DR POWER GRADER to the highest position.

! CAUTION!

PRIOR TO PERFORMING THE NEXT STEPS, SEPARATE THE FUSE HOLDER (FIGURE 1 ON PAGE 9) TO PREVENT ACCIDENTAL ACTIVATION OF THE SCARIFYING TEETH PLATES.

2. Using two (2) 9/16" Wrenches, loosen and remove the Retaining Bolts on the Scarifying Teeth Plate (*Figure 12*).
3. Turn the Scarifying Teeth Plate over and reinstall with the mounting hardware as shown in *Figure 12*.
4. Tighten all of the Retaining Bolts on the Scarifying Teeth Plate and reconnect the Fuse Holder.

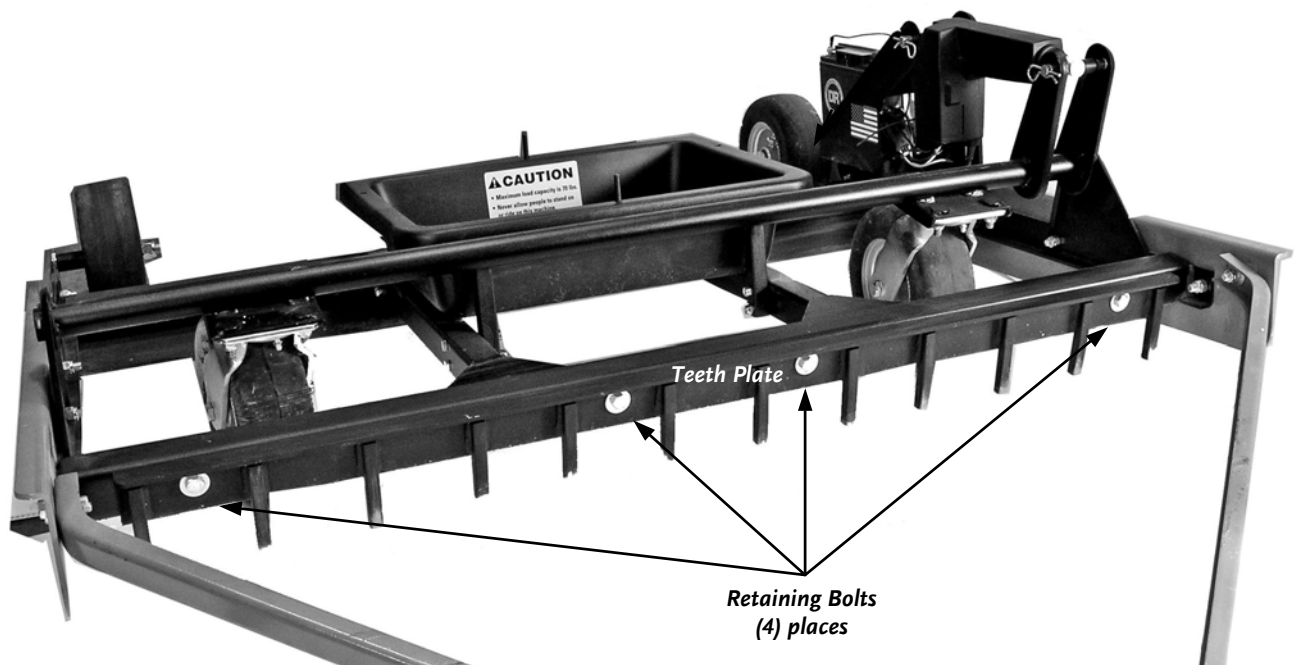


Figure 12

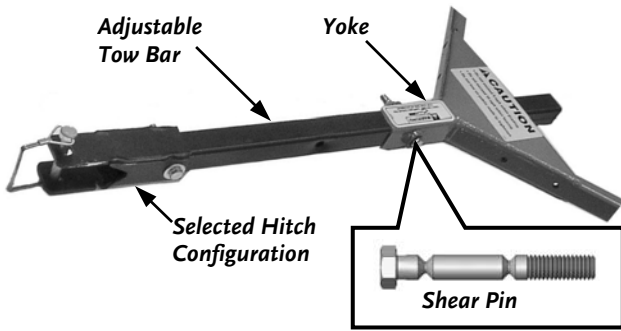


Figure 13

Connecting the DR POWER GRADER to your Tow Vehicle

The following procedure is for connecting the DR POWER GRADER to your tow vehicle using the Adjustable Tow Bar with the Hitch Pin configuration (Lawn Tractor) or Ball Hitch configuration (ATV).

Tools Needed:

- (2) 1/2" Wrench
- (2) 9/16" Wrench

1. Select the appropriate hitch configuration and using two (2) 1/2" Wrenches, attach the hitch to the Adjustable Tow Bar with two (2) 5/16"-18 x 2-1/2" Bolts, 5/16" Flat Washers, and 5/16"-18 Lock Nuts (**Figure 13**).

! NOTICE!

- DO NOT OVER TIGHTEN THE SHEAR PIN.
- USE ONLY THE SHEAR PIN PROVIDED; USE OF ANY OTHER BOLT MAY CAUSE DAMAGE TO YOUR DR POWER GRADER. SEE FIGURE 13.
- THERE ARE TWO (2) EXTRA SHEAR PIN PROVIDED. STORE THEM WITH YOUR OPERATORS MANUAL OR IN A SAFE LOCATION. KEEP ONE WITH YOU WHEN GRADING.

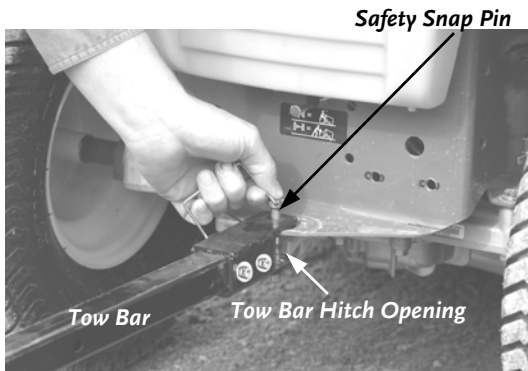


Figure 14

2. Insert the Adjustable Tow Bar into the front of the Yoke and align the holes between the Yoke and Tow Bar to suit the correct towing distance from your vehicle (**Figure 13**). Using two (2) 9/16" Wrenches, bolt the Tow Bar in place using the 3/8"-16 Shear Pin and 3/8" Lock Nut supplied.

Lawn Tractor:

1. Set the parking brake on your Lawn Tractor, lift the Tow Bar, and position the Tow Bar Hitch so that the Hitch Plate on your Lawn Tractor is in the opening in the Tow Bar Hitch (**Figure 14**).
2. Align the hole in the center of the Hitch Plate on your Lawn Tractor with the holes in the Tow Bar Hitch. Insert and secure the Safety Snap Pin (**Figure 14**).

ATV:

1. Stop the engine and put the transmission in 1st gear. Set the parking brake on your ATV (if you have one), lift the Tow Bar on the DR POWER GRADER and slip the Keyhole Hitch over the Hitch Ball on the ATV (**Figure 15**). Pull back on the Tow Bar so the slot in the Keyhole Hitch fits around the Hitch Ball Shaft.

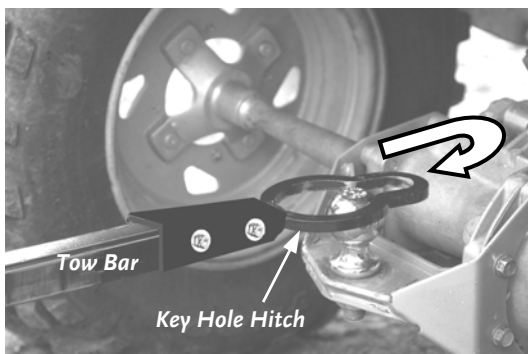


Figure 15

OPERATING YOUR DR POWER GRADER

This chapter covers the procedures for operating your new DR POWER GRADER and discusses basic operation features. You may find it helpful to review the Controls and Features on page 9.

Operating Safety

WARNING!

- NEVER ALLOW ANYONE TO OPERATE THE DR POWER GRADER WITHOUT FIRST READING AND UNDERSTANDING ALL INSTRUCTIONS IN THIS MANUAL. BE THOROUGHLY FAMILIAR WITH THE CONTROLS AND THE PROPER USE OF YOUR GRADER BEFORE USING.
 - NEVER LET PEOPLE RIDE ON THE GRADER.
 - ALWAYS CHECK FOR OBJECTS IN THE GRADER'S PATH BEFORE MOVING.
 - WHEN OPERATING IN A ROADWAY, WE SUGGEST THAT YOU PUT OUT OBSTRUCTIONS (MARKER CONES OR PAILS) TO DIVERT ANY TRAFFIC AWAY FROM YOUR WORK AREA. ALWAYS BE AWARE OF POTENTIAL TRAFFIC HAZARDS.
-

Understanding the Height Adjustment Remote Control Transmitter

The Height Adjustment Remote Control Transmitter contains two (2) Control Buttons. The “UP” Button raises the Scarifying Teeth. The “Down” Button lowers the Scarifying Teeth (**Figure 6** on page 14). For ease of operation and safekeeping, wear the Remote Control Transmitter Lanyard around your neck.

This Device complies with the FCC Part 15. The following two (2) conditions apply to the Transmitter:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

Section 15.105 Information to the user:

NOTE: *This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:*

- *Reorient or relocate the receiving antenna.*
- *Increase the separation between the equipment and receiver.*
- *Consult the dealer or an experienced radio/TV technician for help.*

Operating Parameters

There are four (4) different types of tow vehicles recommended for the DR POWER GRADER. Each vehicle type has specific strengths, weaknesses, and operating parameters when used with the DR POWER GRADER.

- **Garden Tractor/Lawn Tractor**

- 14 HP and/or 400-pound tractor minimum for the 48" Model.
- 19 HP and/or 500-pound tractor minimum for the 60" Model.
- 5° slope or less.
- Material loosened during grading increases traction difficulties.
- Very good speed control and turning radius.
- Frequent Scarifying Teeth adjustment may be necessary to maintain traction.
- Forward motion of the DR POWER GRADER may need to be initiated before ground contact.

- **ATV**

- Traction issues are less evident.
- More difficult to maintain a consistent speed of less than 5 MPH.
- Turning radius is large (best used for large, straight drives).

- **UTV**

- Traction issues are less evident.
- More difficult to maintain a consistent speed of less than 5 MPH.
- Turning radius is large (best used for large, straight drives).
- The tailgate should be lowered for best visibility.

- **Utility Tractor**

- Traction is excellent.
- Visibility is very good.
- With the increased power, the chance of accidentally damaging the DR POWER GRADER's frame is increased. The towing speed **MUST** be kept less than 5 MPH.
- Extend the Tow Bar to the longest setting when using the DR POWER GRADER with a Utility Tractor.

- **Truck or Car**

- Do not use these types of vehicles; the DR POWER GRADER is difficult to see.
- **NEVER** operate the DR POWER GRADER with a Truck (2WD or 4WD). Use of a Truck will void the DR POWER GRADER Warranty.

Operating Tips

CAUTION!

- **CLEAN OUT THE BOTTOM OF THE BATTERY HOLDER COMPLETELY BEFORE RE-INSTALLING THE BATTERY.**
 - **LOWER THE GRADER FRAME COMPLETELY TO THE GROUND SURFACE WHEN TRANSPORTING ON A TRAILER, PARKING ON A HILL, OR SERVICING THE GRADER.**
-

- Use additional weight (up to 70 pounds) in the Weight Tray when grading hard pack to begin scarification.
- Remove weight when the surface material loosens or when experiencing traction difficulties.
- Remove the weight and Weight Tray when grading in muddy conditions or sandy soil.
- Extend the Tow Bar to the longest setting when used with a Utility Tractor.
- Expect to make 4 to 10 passes with the DR POWER GRADER to repair a roadway, depending on the condition.
- Avoid filling Pot Holes filled with water, wait until the holes are dry.
- Use the DR POWER GRADER to work the edges of Pot Holes that are more than 4 feet wide to loosen the sides before you begin filling them.
- Avoid large rocks, embedded ledge, cattle guards, or similar obstructions.
- Remove rocks pulled to the surface during grading to provide a better final graded surface.
 - They can catch under the lawn deck (for lawn tractors).
- Once you have adequately scarified the road surface, raise the Scarifying Teeth Plate to allow the Rear Scraper Blade to create a smooth surface.
 - Raise the Scarifying Teeth Plate out of the ground before turning around or leaving the work area.
- When using a lawn tractor as the tow vehicle, put the lawn mowing deck in the highest setting or just remove the deck to obtain the highest ground clearance.
 - For ease, do your spring grading before re-installing your lawn deck for the summer mowing activity.
- When using the DR POWER GRADER to prepare a seed bed, remove all large debris before grading.
 - Use the Optional Drag Screen to create the best finish in sand or to incorporate seed.
- Use Low Gear when using an ATV as the tow vehicle – Do not exceed 5 MPH while grading.
 - The maximum speed when not grading is 15 MPH.

NOTICE!

- **BRING THE REMOTE CONTROL TRANSMITTER INSIDE WHEN FINISHED GRADING.**
 - **FREQUENTLY CHECK THE TIGHTNESS OF THE BOLTS THAT FASTEN THE SCARIFYING TEETH PLATE TO THE FRAME.**
-

FAQs

- *Can the DR POWER GRADER create a crown in the road?*

Answer: No

- *Can the DR POWER GRADER maintain the crown in the road?*

Answer: Yes, you can grade each side separately.

- *Can the DR POWER GRADER ruin the crown in the road?*

Answer: Yes, only if you grade down the centerline of the road.

- *How long will the battery last?*

Answer: Approximately 20 hours or 800 up/down cycles.

- *Can I use my Lawn Tractor in sandy soils?*

Answer: Lawn Tractors do not perform as well as an ATV or Utility Tractor in sandy soils.

- *Why does the Yoke have a Shear Pin?*

Answer: The Shear Pin will absorb the shock by breaking if you hit a large rock, ledge, or other obstruction offering some protection to your DR POWER GRADER and Tow Vehicle.

Optional Drag Screen

An optional Drag Screen is available for your 48" or 60" DR POWER GRADER. This heavy-duty, flexible-steel screen attaches easily behind the DR POWER GRADER to break up and smooth any clumps that form as you grade the material.

The Drag Screen is also designed to produce a more highly finished surface when using fine dry materials such as sand and to remove the small lines or ridges sometimes left by the Scarifying Teeth or Grader Wheels during the initial grading process. The Drag Screen is ideal for areas that have high sand or soil content such as new lawns, riding rinks, ball fields, or sandy driveways.

The Drag Screen is also very helpful in seeding large areas. By lifting the Scarifying Teeth and Scraper Bar of the DR POWER GRADER above the working surface so that only the wheels make contact, the Drag Screen simply and effectively distributes the topsoil uniformly over the seed.

For more information and to order the Optional Drag Screen for your new DR POWER GRADER, call **Toll-Free 1-800-DR-OWNER (376-9637)**

MAINTAINING THE DR POWER GRADER

This chapter covers regular maintenance procedures that will ensure the best performance and long life of your DR POWER GRADER.

WARNING!

WHEN PERFORMING ANY MAINTENANCE, YOU MUST FIRST SHUT OFF THE TOW VEHICLE, SET THE PARKING BRAKE AND DISCONNECT POWER FROM THE BATTERY OF THE DR POWER GRADER BY SEPARATING THE FUSE HOLDER (FIGURE 1 ON PAGE 9). READ THE "GENERAL SAFETY RULES" (CHAPTER 2) OF THIS MANUAL BEFORE PERFORMING ANY REPAIRS OR MAINTENANCE.

Regular Maintenance Check:

- Keep the battery charged. See page 16.
- Hose down the DR POWER GRADER to keep the Scarifying Teeth Plate clean and clear of debris.

NOTE: Use care not to hose down the Battery and electrical components.

NOTICE!

DO NOT USE A POWER WASHER; THIS MAY FORCE WATER THROUGH THE SEALS ON THE HEIGHT ADJUSTING ACTUATOR.

- Verify that all Nuts and Bolts are tight.
- Check the Shear Pin for wear by grabbing the end and trying to wiggle it. Replace the Shear Pin if worn or loose. Do not over tighten.
- Lubricate the Caster Wheel bearings every 25 hours of operation. See page 28.
- Check the general condition of the DR POWER GRADER, e.g., nuts, bolts, welds, etc.
- Periodically, (every 50 hours is recommended) remove the Scarifying Teeth Plate and clean between the Plate and Frame. This will allow for proper securing of the Scarifying Teeth Plate in its set position.

Caring for the Battery

Proper care can lengthen the life of a battery. Follow these recommendations to ensure your Battery's best performance and long life:

- Do not continue to operate your DR POWER GRADER with a low Battery.
- Try to keep your Battery at full charge to maximize its life. If the machine is not used, charge the Battery monthly. See "Charging the Battery" on page 16.
- Before charging the Battery, observe its external appearance and keep it clean and dry. Never charge or use a Battery that shows cracks, changes shape, leaks, or otherwise obviously damaged.
- Recharge a Battery before fully discharged. **NEVER allow the Battery to run down completely before charging. Leaving the Battery discharged damages the Battery.** Charge the Battery at least once per month, even if you have not used your DR POWER GRADER.
- If the Battery begins to leak, avoid contact with the leaking acid. Place the damaged Battery in a plastic bag, then dispose of it properly.

WARNING!

IF BATTERY ACID DOES CONTACT YOUR SKIN OR EYES, FLUSH WITH COOL WATER FOR AT LEAST 15 MINUTES AND CALL A PHYSICIAN. IF ACID IS INGESTED, CALL A PHYSICIAN IMMEDIATELY.

Recycling a Used Battery

NOTICE!

PLEASE DISPOSE OF USED BATTERIES RESPONSIBLY, ACCORDING TO YOUR LOCAL HAZARDOUS MATERIALS REGULATIONS. NEVER THROW AWAY USED BATTERIES IN YOUR HOUSEHOLD TRASH.

Please dispose of your used Batteries responsibly by recycling them. Call your local Solid Waste Management District or your local waste handler to locate the collection site nearest you. Some collection sites recycle Batteries year-round; others collect them periodically.

You can also visit the Website of Earth 911 for more information (www.earth911.org). Once there, click the Municipal HHW link under Hazardous Household Waste, and enter your zip code. The site lists recycling centers located near you.

For a fee, you can recycle your Batteries with the International Metals Reclamation Company. Visit them at www.inmetco.com and click Services, then click Battery Recycling; or contact them at:

INMETCO
PO Box 720
245 Portersville Road
Ellwood City, PA 16117
(724) 758-2800; fax (724) 758-2845

To learn more about hazardous waste recycling, visit the Website for Battery Council International (www.batterycouncil.org) or for the Environmental Protection Agency (www.epa.gov).

Replacing the Scarifying Teeth Plate

The following procedure is for replacing the Scarifying Teeth Plate.

To replace the Scarifying Teeth Plate:

Tool Needed:

- (2) 9/16" Wrench

1. Use the Linear Actuator to raise the front of the DR POWER GRADER to the maximum position.

! CAUTION!

PRIOR TO PERFORMING THE NEXT STEPS, DISCONNECT THE POWER BY SEPARATING THE FUSE HOLDER (FIGURE 1 ON PAGE 9) TO PREVENT ACCIDENTAL ACTIVATION OF THE SCARIFYING TEETH PLATE.

2. Using two (2) 9/16" Wrenches, loosen and remove the Retaining Bolts on the Scarifying Teeth Plate (*Figure 16*).
3. Remove the old Scarifying Teeth Plate, clean the Frame, and replace with the new Plate.
4. Tighten the Retaining Bolts on the Scarifying Teeth Plate and then reconnect the Fuse Holder.

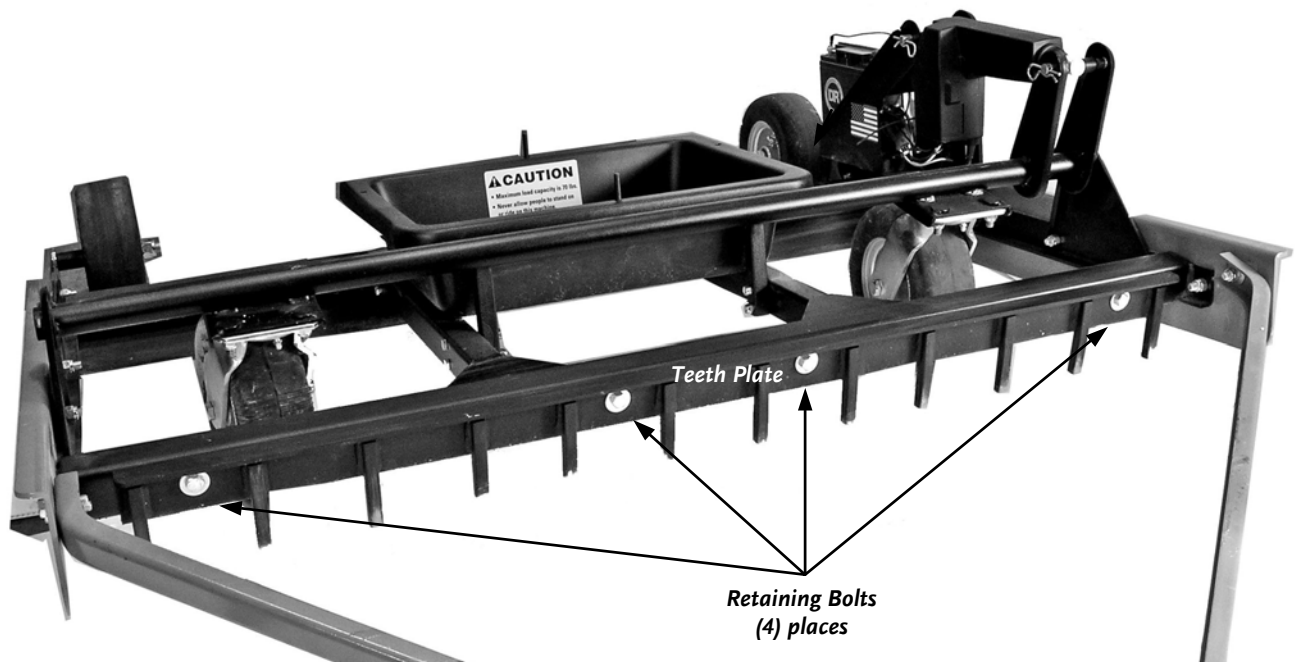


Figure 16

Lubrication

! WARNING!

WHEN PERFORMING ANY MAINTENANCE, YOU MUST FIRST SHUT OFF THE TOW VEHICLE, SET THE PARKING BRAKE AND DISCONNECT POWER FROM THE BATTERY OF THE DR POWER GRADER BY SEPARATING THE FUSE HOLDER (FIGURE 1 ON PAGE 9).

Tools and Supplies Needed

- Flexible hose grease gun
- Lithium grease

NOTE: Pump the grease gun only until you feel slight resistance (2 - 3 pumps).

1. Lubricate the Rear Fixed Wheel, the Front Caster Wheel and Caster bearings at the grease fittings every 25 hours of operation (**Figure 17**).

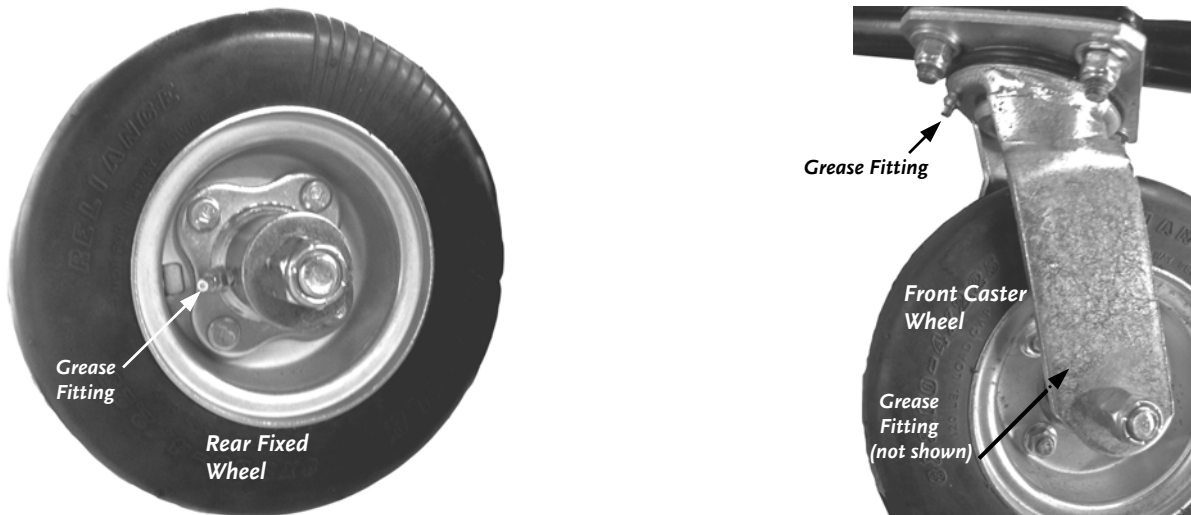


Figure 17

End of Season and Storage

- Charge the Battery and bring it inside to store above freezing temperatures. See page 16.
- Hose down the DR POWER GRADER. Remove the Scarifying Teeth Plate to clean it of debris and then replace it after cleaning the mounting surfaces.

! NOTICE!

DO NOT USE A POWER WASHER; THIS MAY FORCE WATER THROUGH THE SEALS ON THE HEIGHT ADJUSTING ACTUATOR.

- Lubricate the Rear Wheel bearings, Front Wheel bearings, and the Caster bearings.
- Wipe down the DR POWER GRADER to remove any moisture and dirt that may have accumulated.
- Store the Transmitter and the DR POWER GRADER in a dry area to prevent moisture from damaging the electrical components of the machine.

TROUBLESHOOTING

Most problems are easy to fix. Consult the Troubleshooting Table below for common problems and their solutions. If you continue to have trouble, call Country Home Products, Inc. for support.

Troubleshooting Table



WHEN PERFORMING ANY MAINTENANCE, YOU MUST FIRST SHUT OFF THE TOW VEHICLE, SET THE PARKING BRAKE AND DISCONNECT POWER FROM THE BATTERY OF THE DR POWER GRADER BY SEPARATING THE FUSE HOLDER (FIGURE 1 ON PAGE 9).

<i>SYMPTOM</i>	<i>POSSIBLE CAUSE</i>
<i>The wheels on the tow vehicle spin during the grading operation.</i>	<ul style="list-style-type: none"> ⇒ The Scarifying Teeth are set too low, causing too large a section of surface to be removed. Raise the height of the Scarifying Teeth Plate to improve traction. ⇒ There is too much weight in the Weight Tray. Remove some of the weight. ⇒ The Tow Vehicle is not adequate for your application.
<i>The Scarifying Teeth Plate will not move up or down with the Transmitter.</i>	<ul style="list-style-type: none"> ⇒ The Battery charge is low; charge the Battery. ⇒ Check the Fuse and replace it if necessary. See Figure 1 on page 9. ⇒ Loose wire connection. Check the Actuator/Battery Cable connection and the Battery Terminal connections. ⇒ The Battery in the Transmitter may be dead; replace it. See page 18. ⇒ If the problem persists, call 1-800-DR-OWNER (376-9637) for assistance.


PARTS LIST, SCHEMATIC DIAGRAM AND WARRANTY

Parts List - DR POWER GRADER Frame Assembly

NOTE: Part numbers listed are available through Country Home Products, Inc.

Ref#	Part#	Description	Ref#	Part#	Description
01	110731	Nut, Nylon Lock, 1/4"- 20	32	104831	Battery, 12 VDC, 17 Amp-Hour
02	124511	Clamp, Battery, 7-1/8" W x 5-1/2" H	33	228741	Receiver
03	191451	Bracket, Battery Mount	34	118731	Nut, Nylon lock, 10-24
04	114781	Screw, Pan Head, 10-24 x 5/8"	35	191481	Wheel, Castor, 8.75" Diameter
05	187371	Pin, Clevis, 1/2" x 4.5"L	36	147281	O-Ring, Swivel Wheel
06	191541	Spacer, .545" ID, .675" OD, 1.06" L	37	121701	Washer, Flat, 3/8" SAE
07	230971	Actuator, Linear Bar w/Battery Harness			
08	191551	Spacer, .545" ID, .675" OD, .71" L	Items Not Illustrated		
09	228681	Bracket, Caster, Left	113011		Charger, Battery
10	211541	Pin, Clevis, 1/2" x 3.5"L	113041		Adapter, Battery Charger
11	160031	Pin, Hitch Clip, 1/2" to 9/16"	193481		Label, Caution, Load Capacity
12	233941	Axle Assembly (48" model)	142201		Fuse, 20 amp
	233951	Axle Assembly (60" model)			
13	228781	Lanyard			
14	228791	Transmitter			
15	228671	Bracket, Caster, Right			
16	186551	Pin, Cotter, 3/16" x 2.0", ZP			
17	110751	Nut, Nylon Lock, 3/8"-16			
18	229241	Plate, Scarifying Teeth, 48"			
	229251	Plate, Scarifying Tooth, 60"			
19	112391	Washer, Flat, 3/8" USS			
20	150431	Bolt, 3/8"-16 x 1-1/4", GR.5, ZP, HCS			
21	228691	Rail, Side, Right			
22	191401	Frame, 48" Subassembly			
	221861	Frame, 60" Subassembly			
23	191471	Wheel, 8.0" Diameter			
24	191441	Blade, Scraper (48" model)			
	221911	Blade, Scraper (60" model)			
25	214111	Spacer, .63" ID, .75" OD, 3.075" L			
26	160071	Nut, Nylon Lock, 5/8"- 18			
27	165141	Washer, .385" ID, 1.390" OD			
28	191531	Spacer, .688" ID, 1.0" OD, 1.38" L			
29	157451	Washer, Flat, 5/8" USS			
30	228701	Rail, Side, Left			
31	191741	Bolt, 5/8"-18 x 1-1/4, HCS			

Schematic - DR POWER GRADER Frame Assembly

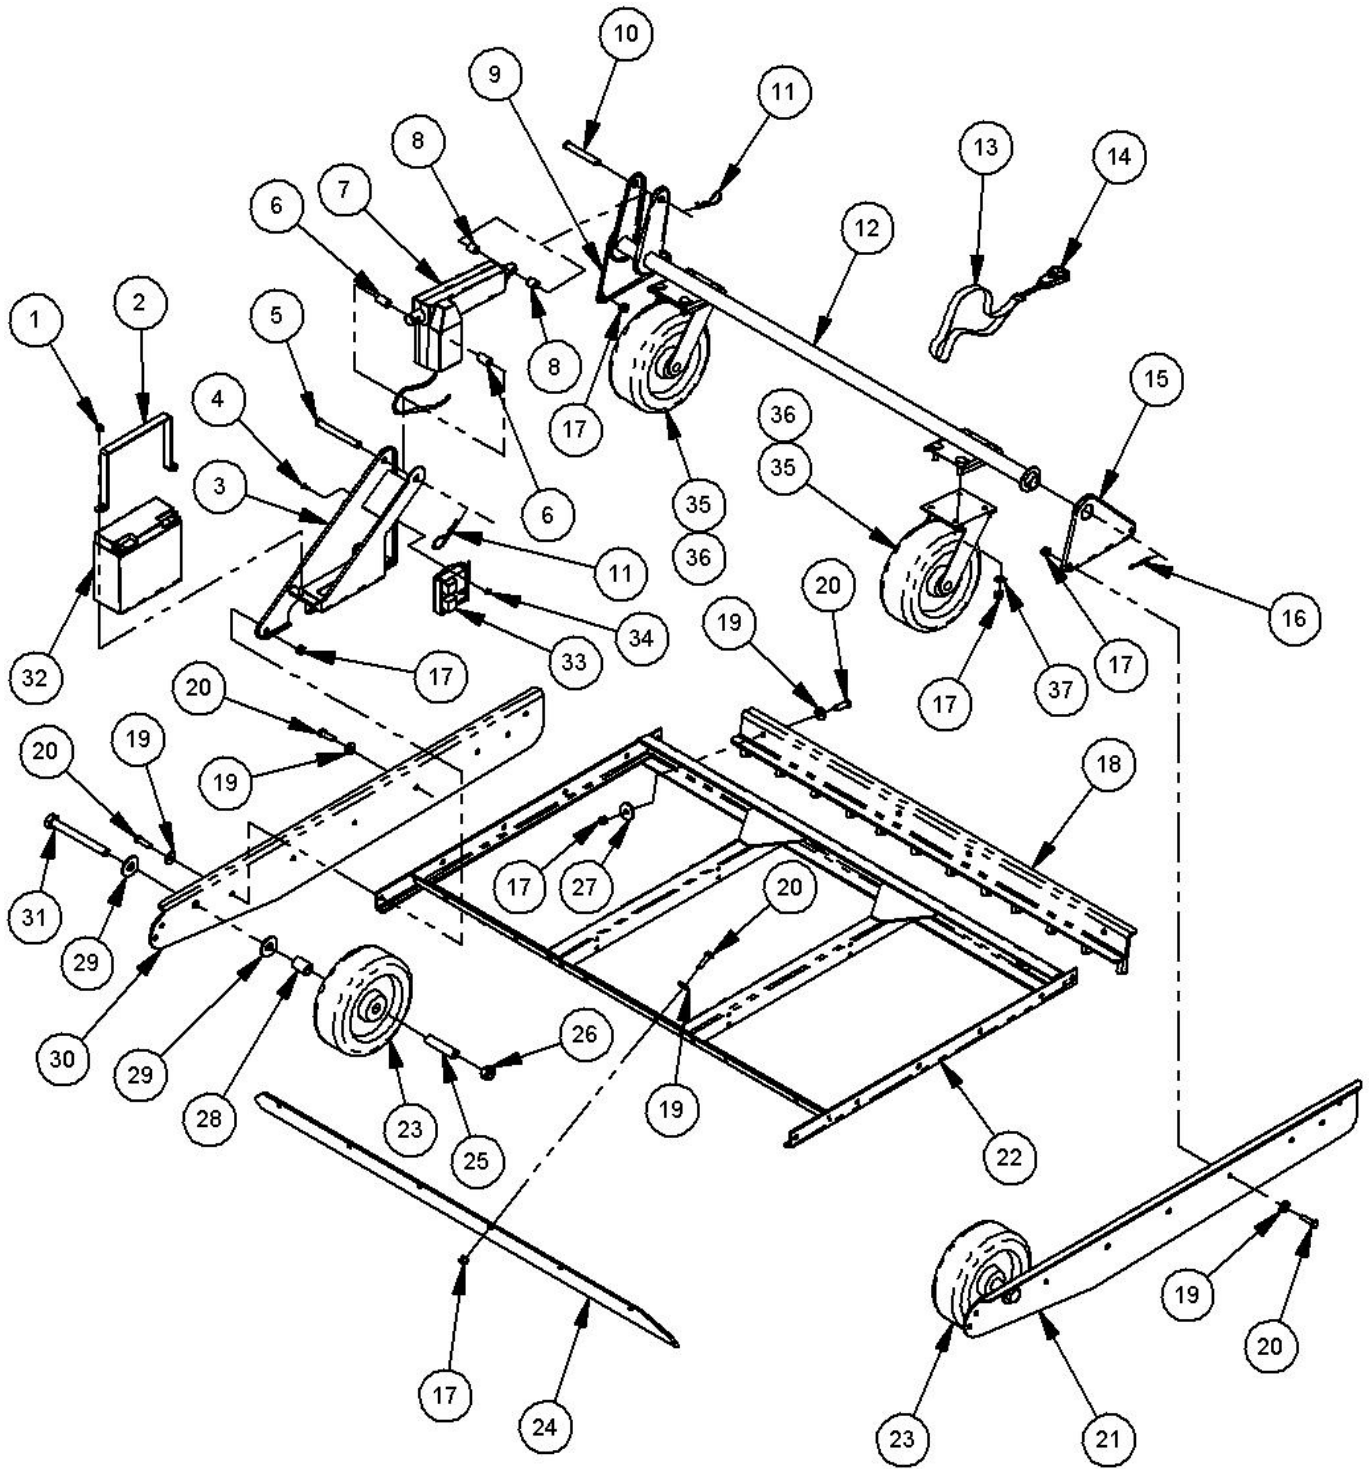

070523

Parts List - DR POWER GRADER Yoke Assembly


NOTE: Part numbers listed are available through Country Home Products, Inc.

Ref#	Part#	Description
01	112261	Tray, Tool 15" x 18" x 4.5"
02	191771	Hitch, Tow, Tractor
03	211551	Pin, Snap, Safety, 3/8" x 2.25"
04	110761	Nut, Nylon Lock, 5/16"-18
05	112411	Washer, Flat, 5/16" USS
06	193731	Hitch, Tow Hook
07	111591	Bolt, 5/16"-18 x 2-1/2" HCS
08	211521	Bar, Tow
09	191871	Pin, Shear
10	110751	Nut, Nylon Lock, 3/8"-16
11	191491	Yoke (48" model)
	221881	Yoke (60" model)
12	112391	Washer, Flat, 3/8" USS
13	150431	Bolt, 3/8"-16 x 1-1/4", GR.5, ZP, HCS
14	180851	Bolt, 1/4"-20 x 2- 3/4", HCS
15	110731	Nut, Nylon Lock, 1/4"-20
16	191821	Bracket, Tray Support 48"
	221901	Bracket, Tray Support 60"

Items Not Illustrated

124371	Label, American Flag
192391	Label, 5-3/4" DR Logo, Silver
193391	Label, Warning MPH
214191	Label, Shear Pin Warning
193401	Label Serial Number

Schematic - DR POWER GRADER Yoke Assembly

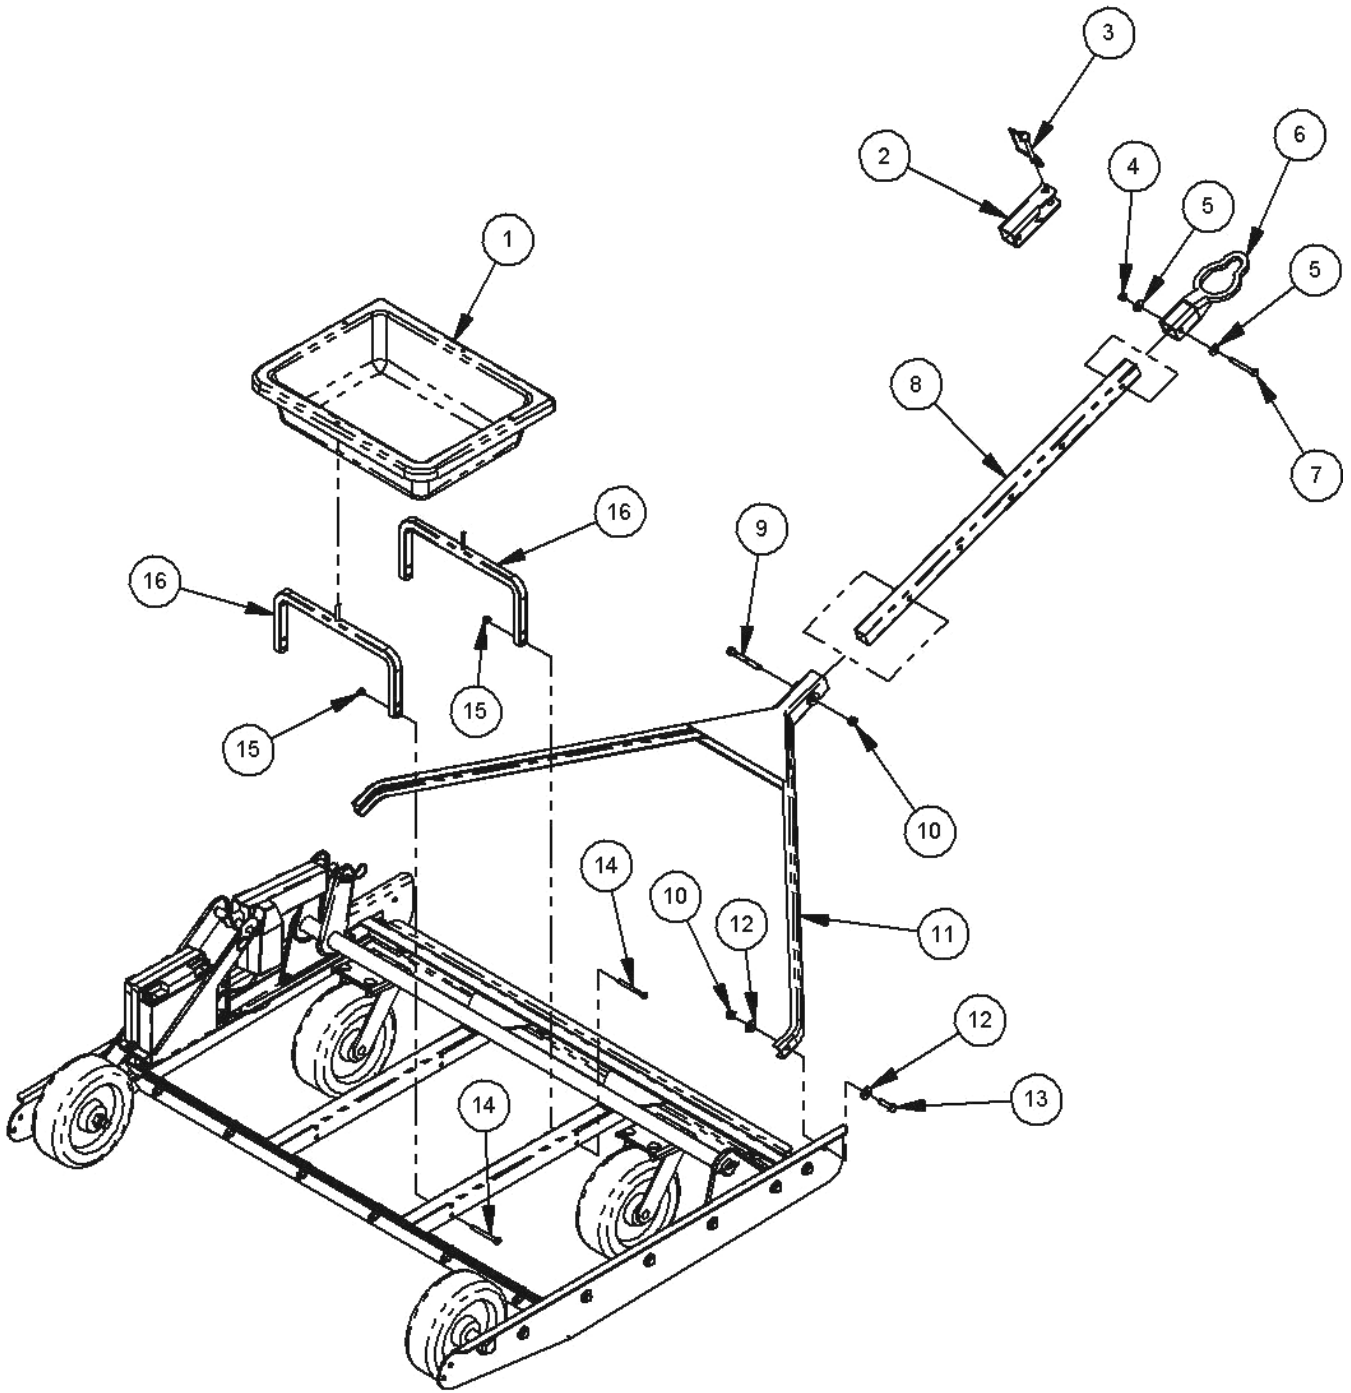

070523


CALL TOLL-FREE 1-800-DR-OWNER

Parts List - DR POWER GRADER Optional Drag Screen (Kit No. 210861)

NOTE: Part numbers listed are available through Country Home Products, Inc.

Ref#	Part#	Description
01	210861	Drag Screen, 48", w/Chain and Links
	226861	Drag Screen, 60", w/Chain and Links
02	230991	Snap, Spring, 5/16"
03	211751	Connector, Threaded
04	211771	Chain, Tangle Resistant

Schematic - DR POWER GRADER Optional Drag Screen

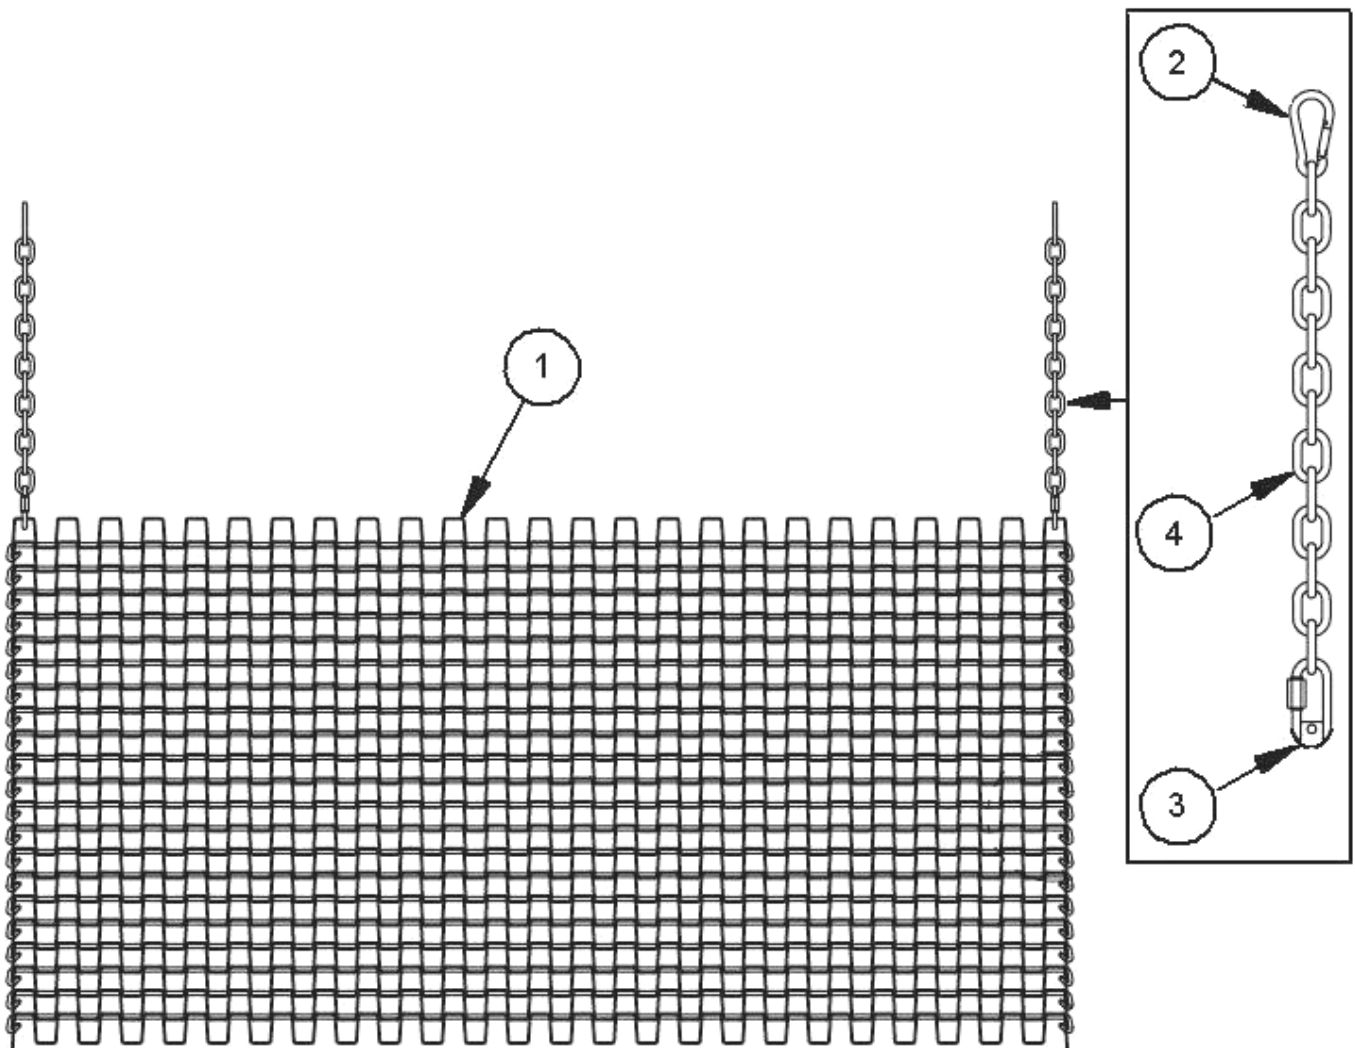

070614

DR[®] POWER GRADER



2-Year Limited Warranty Terms and Conditions

The DR[®] POWER GRADER is warranted for two (2) years against defects in materials or workmanship when put to ordinary and normal consumer use; ninety (90) days for any other use.

For the purposes of all the above warranties, "ordinary and normal consumer use" refers to non-commercial residential use and does not include misuse, accidents, or damage due to inadequate maintenance.

Country Home Products, Inc. (home of DR[®] Power Equipment) certifies that the DR[®] POWER GRADER is fit for ordinary purposes for which a product of this type is used. Country Home Products, Inc. however, limits the implied warranties of merchantability and fitness in duration to a period of two (2) years in consumer use, ninety (90) days for any other use.

The 2-Year Limited Warranty on the DR[®] POWER GRADER starts on the date the machine ships from our factory. The 2-Year Limited Warranty is applicable only to the original owner.

The warranty holder is responsible for the performance of the required maintenance as defined by the owner's manual. The warranty holder is responsible for replacement of normally wearing parts such as the Scarifying Teeth, Rear Scraper Blade, and Battery. Attachments and accessories to the machine; are not covered by this warranty.

During the warranty period, the warranty holder is responsible for the machine transportation charges, if required. During the warranty period, warranty parts will ship by standard method at no charge to the warranty holder. Expedited shipping of warranty parts is the responsibility of the warranty holder.

SOME STATES DO NOT ALLOW LIMITATIONS ON THE LENGTH OF IMPLIED WARRANTIES, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

Country Home Products, Inc. shall not be liable under any circumstances for any **incidental or consequential damages or expenses** of any kind, including, but not limited to, cost of equipment rentals, loss of profit, or cost of hiring services to perform tasks normally performed by the DR[®] POWER GRADER.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

Customer Service Hotline

Country Home Products, Inc.'s objective is to have 100% satisfied customers. For that reason, we operate a 6-day-a-week Technical Service Department for our Owners. You can access a Representative by dialing our TOLL-FREE Hotline at **1-800-DR-OWNER (376-9637)**. The sole job of our well-trained and friendly folks is to ensure that you get any help you need in a timely fashion. They are there to answer all your questions including: (1) inquiries on any of the above warranties, (2) inquiries about replacement parts, or (3) your questions regarding service, maintenance, and operation.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

Daily Checklist for the DR POWER GRADER

To help maintain your DR POWER GRADER for optimum performance, we recommend you follow this checklist each time you use your machine.

- HARDWARE:** Check all nuts and bolts to be sure that the components are secure.
- FRAME:** Check all welds to be sure that the frame is intact and secure.
- CLEAN:** Make sure the Scarifying Teeth Plate and the Frame are clean and free of debris.
- BATTERY:** Make sure the Battery is fully charged.



DR[®] Power Equipment, *A division of Country Home Products[®]*

127 MEIGS ROAD, P.O. BOX 25, VERGENNES, VERMONT 05491

1-800-DR-OWNER (376-9637) • www.dr-owner.com

©2007 CHP, Inc. 230981A