



Side Rails

Accessory for the
NEUTON Garden Cart

Attaching the Side Rails

These instructions explain how to attach and remove the Side Rails. If you have any questions, please call Customer Service at 1-866-NEUTON1 (638-8661) for assistance.

To attach the Side Rails:

1. Hold the side rail upright with the clips facing the outside of your Cart, aligned with the stake holes on the side of your Cart (as shown in the photo).
2. Press down evenly and firmly until the clips snap securely into place.
3. Repeat the process with the other Side Rail.



To remove the Side Rails:

1. Gently pull a Side Rail clip out from the Cart and lift that end of the Side Rail until the clip clears the side of the Cart.
2. Now pull out the clip on the other end of the Side Rail, then lift the entire Side Rail from the Cart.
3. Repeat the process with the other Side Rail.

COUNTRY HOME PRODUCTS®, Inc.

MEIGS ROAD, P.O. BOX 25, VERGENNES, VERMONT 05491

1-866-NEUTON1 (638-8661) • www.neutonowners.com

208501 A ©2005 CHP, Inc.

NEUTON® and the NEUTON logo are trademarks of Country Home Products, Inc. All rights reserved.
