DR[®] FIELD and BRUSH MOWER

Installing and Using the Rocky Area Mowing Attachment

Tools & Supplies Needed:

- 15/16" wrench or socket
- air wrench if available
- gloves or rag to handle the blade
- your Operating Instructions for reference

WARNING! Before attaching the Rocky Area Mowing Attachment, or performing any maintenance procedures, the engine should be stopped and the spark plug wire disconnected.

To Install the Rocky Area Mowing Attachment

- 1. Remove the blade.
 - a. Block the blade with a piece of wood between the blade and the skid on the chute side of the deck.
 - Remove the blade nut (right-hand, regular thread) and washer.
 Note: You may need a length of pipe to fit over the wrench for more leverage when removing the blade nut.
 - c. Remove the blade.
- 2. Mount the Rocky Area Mowing Attachment with the blade washer and blade lock nut, and tighten (*Figure 1*).
- 3. Install cords as shown in Figure 2.

Using the Rocky Area Mowing Attachment

- As with any string trimmer, the tips of the cutting cords can throw sticks, small stones, gravel and bits of debris over great distances at great velocity. <u>Do</u> not travel over loose materials such as gravel or <u>mulch while the cords are spinning</u>. Doing so could cause personal injury or property damage from thrown objects.
- Be cautious around fencing, wire, ropes and hoses. These and other debris can become wound around the shaft causing damage to the machine or injuring the operator.
- Cords will not cut woody vegetation, and will not cut as cleanly as your mower's steel blade. For the best cut, we recommend mowing in first or second gear and overlapping rows as you mow.
- Cut cord in 21" lengths. If you're using an 8.0 HP model, cut cords in 19" lengths.
- If cords are hitting the deck and fraying, cut a little off the ends to prevent interference.

If you have questions, please call one of our Technical Service Representatives **TOLL-FREE 1(800)DR-OWNER(376-9637)**.





Figure 1

