

DR[®] LEAF & LAWN VACUUM



Deck Boot Adapter kit# 35157

These instructions are for installation of the DR Deck Boot Adapter Kit for the DR LEAF AND LAWN VACUUM. This Kit will enable you to connect our Leaf and Lawn Vacuum 8" Hose to your smaller non DR Deck Adapter. Please keep these instructions with your DR LEAF and LAWN VACUUM Safety and Operating Instructions manual for reference.

Parts Supplied:

| Part # | Description | Qty |
|--------|--|-----|
| 35165 | Adapter, 6" Boot To 8" Cuff..... | 1 |
| 11158 | Bolt, HCS, 5/16-18 X 1", GR5, ZP | 2 |
| 11241 | Washer, Flat, 5/16", USS..... | 2 |
| 11076 | Nut, Nylon Lock, 5/16-18, ZP..... | 2 |

Tools needed:

- Drill with 5/16" Drill Bit
- Two 1/2" Wrenches

WARNING

Before performing this Kit installation, stop the engine, wait five minutes to allow all parts to cool. Disconnect the spark plug wire, keeping it away from the spark plug.

1. Insert the Deck Boot Adapter over the end of the Deck Adapter as far as it will go (Figure 1).
2. Rotate the Deck Boot Adapter so that the holes are located with one on each side of the Adapter.
3. Using the existing holes in the Deck Boot Adapter, drill holes through the Deck Adapter with the 5/16" Drill Bit.
4. Secure the Deck Boot Adapter with the two Bolts (Head on the inside), Locknuts and Washers (Washers on Nut side) using two 1/2" Wrenches. Be careful not to over tighten and damage the Hose Adapter.

Note: Attaching the Washer and Locknut on the outside of the Adapter prevents debris from collecting on the inside.

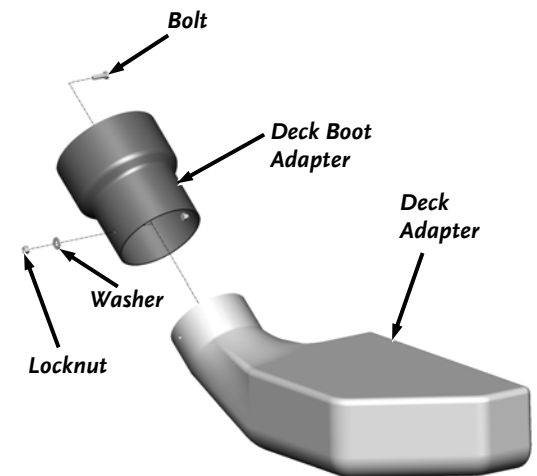


Figure 1

If you have any questions please contact us at www.DRpower.com or call 1-800-DR-OWNER (376-9637) for assistance.