


DR[®] POWER GRADER

SAFETY & OPERATING INSTRUCTIONS

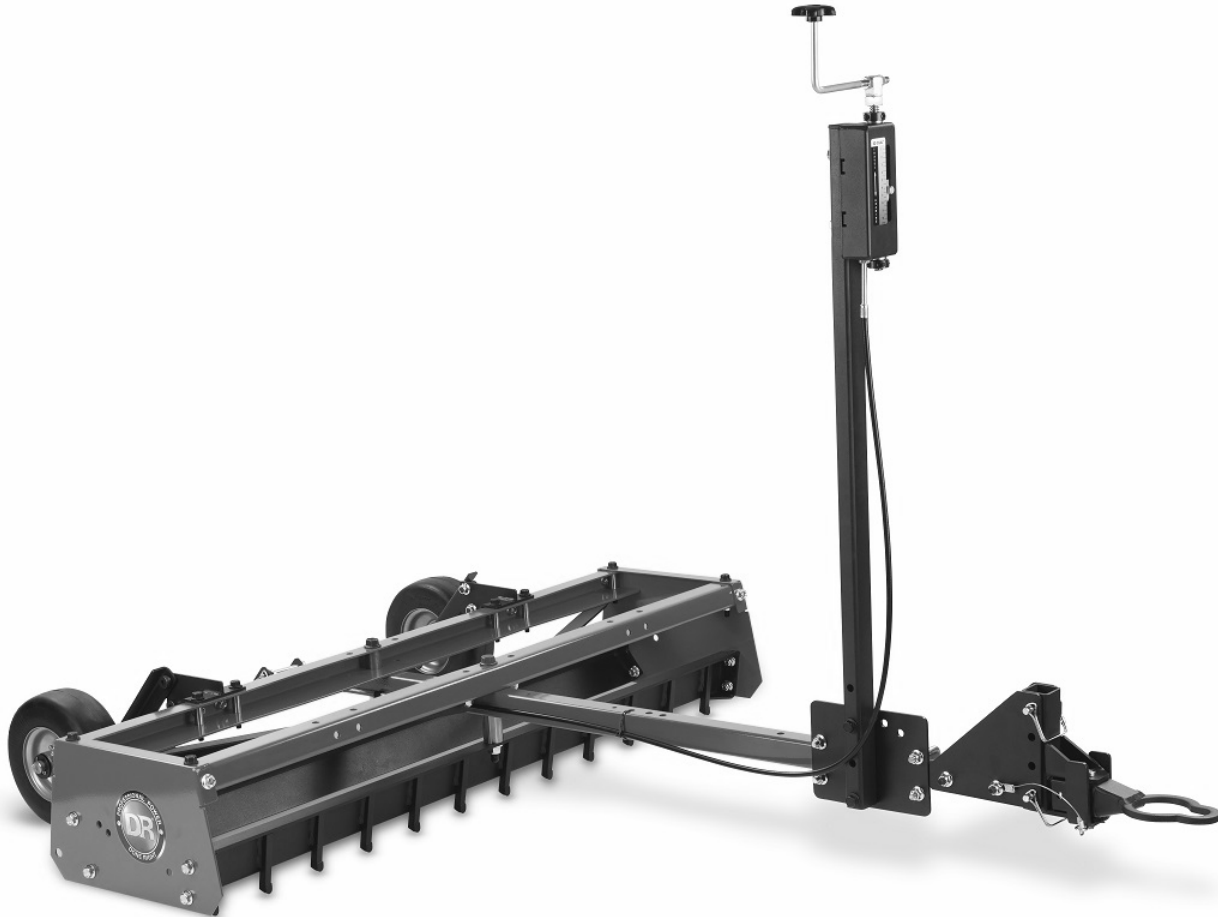

Serial No. _____

Order No. _____

Original Language

DR Power Equipment
Toll-free phone: 1-800-DR-OWNER (376-9637)
Fax: 1-802-877-1213
Website: www.DRpower.com

WARNING

Read and understand this manual and all instructions before operating the DR POWER GRADER.

Table of Contents

Chapter 1: General Safety Rules..... 3

Chapter 2: Setting Up the DR POWER GRADER..... 6

Chapter 3: Operating The DR POWER GRADER 15

Chapter 4: Maintaining The DR POWER GRADER 20

Chapter 5: Troubleshooting 21

Chapter 6: Parts Lists and Schematic Diagrams..... 22

Conventions used in this manual

! WARNING

This indicates a hazardous situation, which, if not avoided, could result in death or serious injury.

! CAUTION

This indicates a hazardous situation, which, if not avoided, could result in minor or moderate injury.

NOTICE

This information is important in the proper use of your machine. Failure to follow this instruction could result in damage to your machine or property.

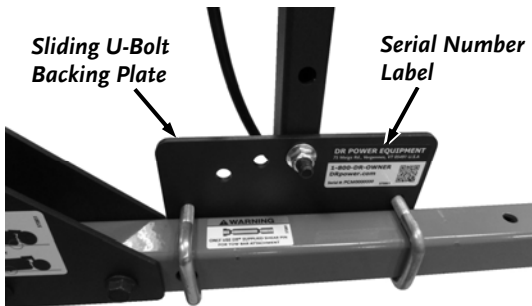


Figure 1

Serial Number and Order Number

A Serial Number is used to identify your machine and is located on the Serial Number Label on your machine (**Figure 1**). An Order Number is used to check and maintain your order history and is located on the upper left portion of your packing slip. For your convenience and ready reference, enter the Serial Number and Order Number in the space provided on the front cover of this manual.

Additional Information and Potential Changes

DR Power Equipment reserves the right to discontinue, change, and improve its products at any time without notice or obligation to the purchaser. The descriptions and specifications contained in this manual were in effect at printing. Equipment described within this manual may be optional. Some illustrations may not be applicable to your machine.


Chapter 1: General Safety Rules

! WARNING


Read this safety & operating Instructions manual before you use the DR POWER GRADER. Become familiar with the operation and service recommendations to ensure the best performance from your machine. If you have any questions or need assistance, please contact us at www.DRpower.com or call toll-free 1-800-DR-OWNER (376-9637) and one of our Technical Support Representatives will be happy to help you.

Labels


Your DR POWER GRADER carries prominent labels as reminders for its proper and safe use. Shown below are copies of all the Safety and Information labels that appear on the equipment. Take a moment to study them and make a note of their location on your POWER GRADER as you set up and before you operate the unit. Replace damaged or missing safety and information labels immediately.

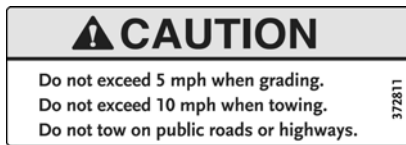


#37281

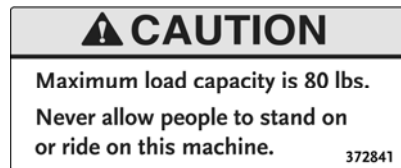


#37284

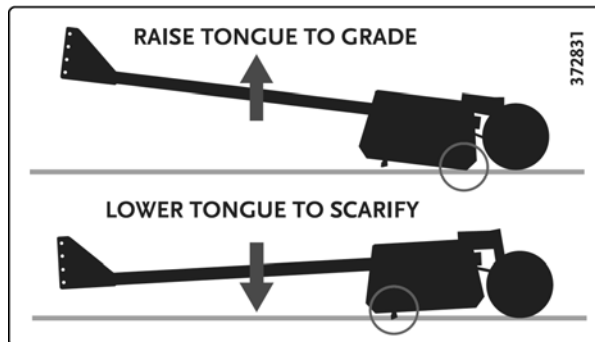

#37283

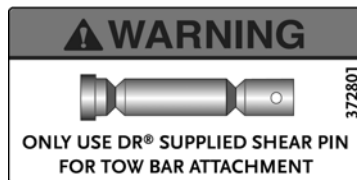

#37280

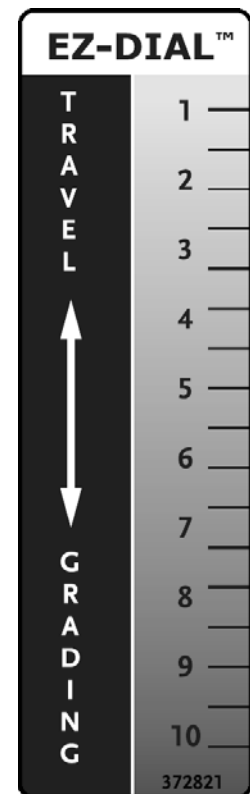

#37282

Protecting Yourself and Those Around You

WARNING

Always take the following precautions when operating this grader:

- Always wear protective goggles or safety glasses with side shields while grading to protect your eyes from possible thrown bits of dirt or gravel.
 - Wear shoes with non-slip treads when using your DR Power Grader. If you have safety shoes, we recommend wearing them. Do not use the grader while barefoot or wearing open sandals.
 - Wear a helmet when operating an ATV.
-

Operating the DR POWER GRADER Safely

WARNING

You must operate the Power Grader safely. Unsafe operation can create a number of hazards for you. Always take the following precautions when using this Grader:

- Read, understand, and follow all instructions in this manual. Be thoroughly familiar with the controls and the proper use of your Grader before using.
 - Thoroughly inspect the area where your Grader will be used, and remove all stones, sticks, wire, pet supplies, or lawn toys, and any other foreign objects that you could run over. Also, note the location of stumps, and other possible hazards that you should avoid during operation.
 - Watch for traffic when operating in or near roadways. Pay extra attention when operating near public roadways.
 - When operating in a roadway, we suggest that you put out obstructions (marker cones or pails) to divert any traffic away from your work area.
 - Be aware of your surroundings when operating the DR Power Grader, e.g. ditches, culverts, drop-offs, and hills.
 - Never allow people who are unfamiliar with these instructions to use the DR Power Grader.
 - To be safe, do not operate the grader near small children or pets, and never allow children to operate the Power Grader. Stop the grading action when another person or pet approaches.
 - Do not allow people to ride on the Grader.
 - If you have to stop to remove any debris from the Grader, always shut off the tow vehicle's engine and set the parking brake.
 - Do not, under any conditions, remove, bend, cut, fit, weld, or otherwise alter standard parts on the DR Power Grader. Modifications to your machine could cause personal injuries and will void your warranty.
 - While using the DR Power Grader, don't hurry or take things for granted.
 - Do not operate the Grader when under the influence of alcohol or medication.
 - Use the DR Power Grader only in daylight or good artificial light.
-

CAUTION

The DR Power Grader must be operated safely to prevent or minimize the risk of minor or moderate injury. Unsafe operation can create a number of hazards for you. Always take the following precautions when operating this Power Grader:

- Keep in mind that the operator or user is responsible for accidents or hazards occurring to other people, their property, and themselves.
 - Do not use the DR Power Grader to drag, tow, or carry items.
 - Never operate the DR Power Grader with a truck (2wd or 4wd); doing so will void the DR Power Grader warranty.
 - Never leave the DR Power Grader unattended. If you leave the area, shut off the tow vehicle, and remove the key.
 - Keep all nuts and bolts tight and keep the equipment and attachments in good operating condition.
 - Use only manufacturer-recommended replacement parts.
 - Do not use the DR Power Grader in a manner not in accordance with these instructions.
-

Safety for Children and Pets

WARNING

Tragic accidents can occur if the operator is not alert to the presence of children and pets. Children and pets are often attracted to the grading activity. **Never** assume that children or pets will remain where you last saw them.

- Keep children out of the grading area and under the watchful care of a responsible adult.
 - Be alert, stop and turn the tow vehicle off if children or pets enter the work area.
 - Never allow children to operate the DR Power Grader.
 - Never allow children or pets to ride on the tow vehicle or the DR Power Grader.
-

California Proposition 65

WARNING

California Proposition 65:

- This product contains or emits chemicals known to the State of California to cause cancer, birth defects, and other reproductive harm.
-

A Note to All Users

No list of warnings and cautions can be all-inclusive. If situations occur that are not covered by this manual, the operator must apply common sense and operate this DR POWER GRADER in a safe manner. Contact us at www.DRpower.com or call 1-800-DR-OWNER (376-9637) for assistance.

Chapter 2: Setting Up the DR POWER GRADER

It may be helpful to familiarize yourself with the controls and features of your DR POWER GRADER as shown in Figure 1 before beginning these procedures. If you have any questions at all, please feel free to contact us at www.DRpower.com.

DR POWER GRADER Controls and Features

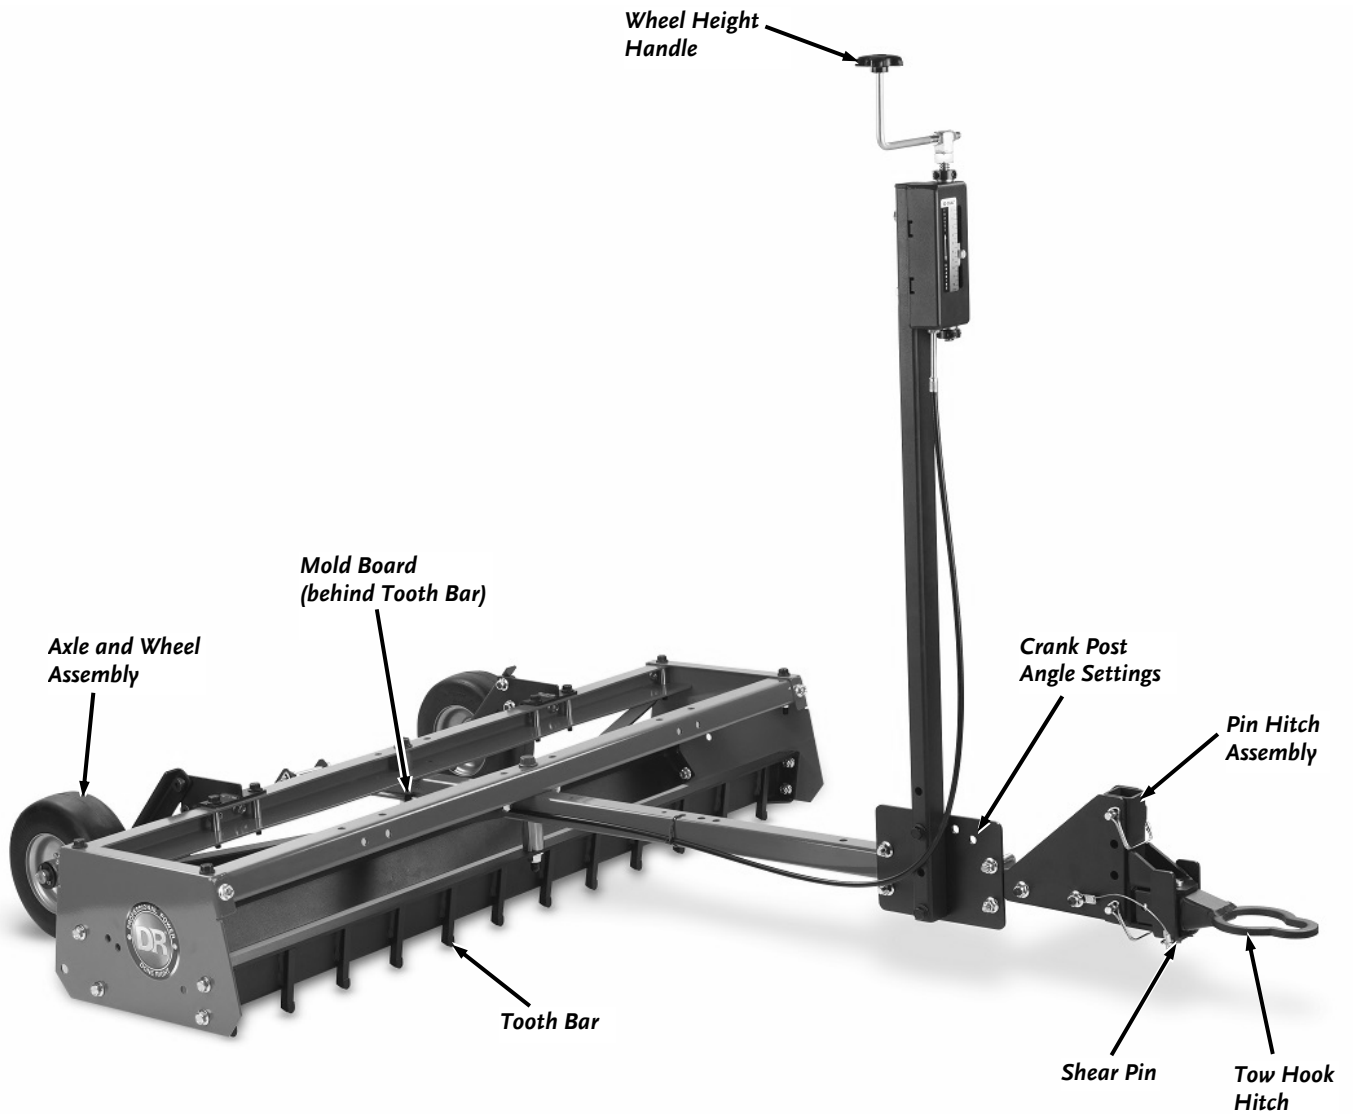


Figure 2

Specifications

Teeth	12-Tungsten Carbide-Tipped 4142 Hardened Alloy Steel
Mold Board	Cold Rolled 1018 Steel 3-Gauge (.2391")
Wheels	Flat free- Solid Rubber, 8"X3.00"-4" /2.25"
Hitch Height Range	3.63" to 13.922"
Tooth length below frame rails	.8"
Number of revolutions to raise teeth 1" in	8
Weight capacity (blocks)	80lbs (2 standard 16"x8"x8" cinder blocks)
Control Box Heights	36.862"to 38.862" from tow bar
Control Box post Angle	90degrees,75degrees and 60 degrees
Control Box adjustable location	Sliding control box post for different tow vehicles
1/2" Shear Pin	Protects against tow vehicle damage
Reversible Scraping Blade (Mold Board)	Grading or grooming blade types
Adjustable Angle Scraping Blade (Mold Board)	50degrees,90degrees,105degrees (50 for aggressive cutting,90 for light
Drag Screen	Optional drag screen
Minimum Tow Vehicle HP	14 hp or 400 lb. lawn tractor or garden tractor
Hitch Type	Pin or Ball
Dim's (assembled)	68"X49"X44"
Weight (Grader without weights)	126LBS

Main Parts (Figure 3 and Table below)

Description	Qty
1 Tow Bar	1
2 Wheels	2
3 Crank Post	1
4 Axle Assembly	1
5 Height Adjust Control Box Assembly	1

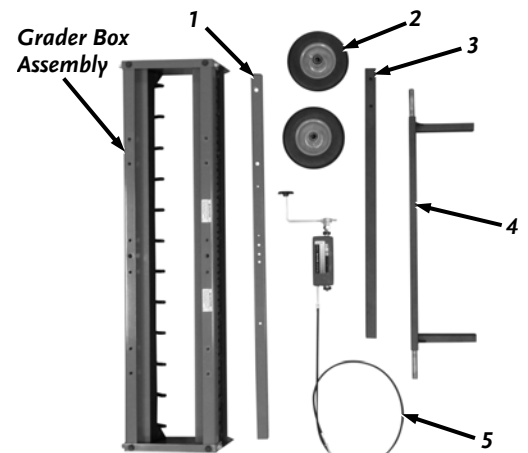


Figure 3

Parts Box (Figure 4 and Table below)

Description	Qty
1 Bracket, Hitch Adjustment	2
2 Bracket, Axle	2
3 Hitch Assembly, Pin	1
4 Bracket, Spring, Cable	1
5 Plate, Backing, U-bolt, Sliding	1
6 Bracket, Anti-Rotation, Hook, Tow	1
7 Hitch, Tow Hook	1

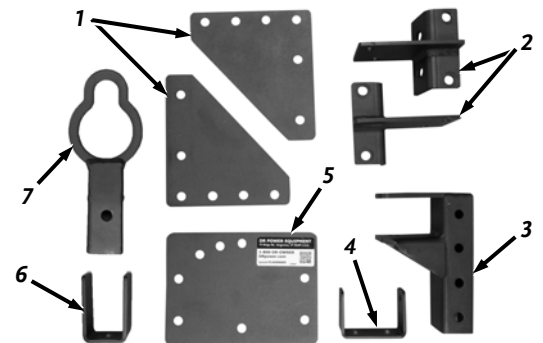


Figure 4

Hardware Bag

Some machines will have flanged Bolts and Locknuts and some will not, depending on availability. The flange is formed onto the Bolts and Locknuts so a Washer is not necessary. Non-flanged hardware uses a Washer under the Bolt Head and under the Locknut. Refer to the Table listed as "Flange Hardware" and **Figure 5** if you have Flanged Hardware in your hardware Bag. If your Hardware Bag contains all regular Non-Flange Hardware, refer to the Table listed as "Non-Flange Hardware" and **Figure 6**.

Flange Hardware (Figure 5 and Table below)

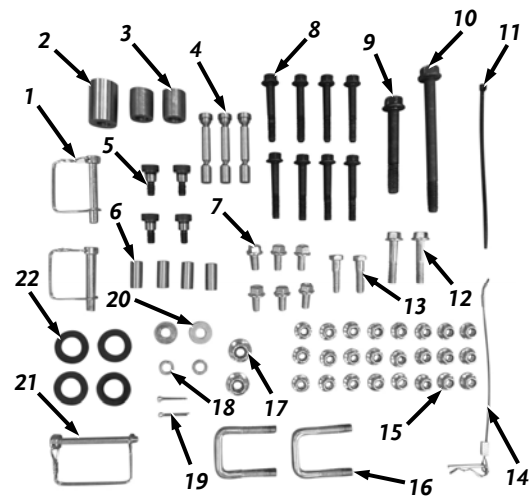


Figure 5

Index#	Part#	Description	Qty
1	21155	Pin, Snap Safety, 3/8" X 2.75"	2
2	36706	Spacer, Tooth Bar	1
3	37186	Spacer, Rail, Center	2
4	37237	Pin, Shear, 1/2"	3*
5	36737	Bolt Shoulder, 1/2 X 3/8!, 3/8-16	4
6	36702	Spacer, Rail	4
7	36739	Bolt, HHCS, Flanged, 3/8-16 X .75", GR5, ZP	6
8	37184	Bolt, HCS, Flanged, 3/8-16 X 2.5", GR8	8
9	37187	Bolt, HHCS, Flanged, 1/2-13 X 3-3/4", GR8	1
10	37185	Bolt, HHCS, Flanged, 1/2-13 X 6", GR8	1
11	12797	Cable Tie, 17", Nylon Black	1
12	33350	Bolt, HHCS, Flange, 3/8-16 x 2"	2
13	11985	Bolt, HCS, 3/8-16 X 1-1/2", GR5, ZP	2
14	37236	Lanyard, Hair Pin	1
15	33333	Nut, Nylon Lock, 3/8-16	24
16	36680	U-bolt, Post	2
17	33335	Nut, Nylon Lock, 1/2-13	2
18	18081	Washer, Lock, Medium Split, 3/8"	2
19	37190	Pin, Cotter, 3/32" x 1", ZP	2
20	12170	Washer, Flat 3/8", ZP, ANSI Narrow	2
21	37191	Pin, Snap Safety, 5/16" x 3"	1
22	18064	Washer, .8" ID, 1.5" OD X .11"	4

* Two Shear Pins are spares

Non-Flange Hardware (Figure 6 and Table below)

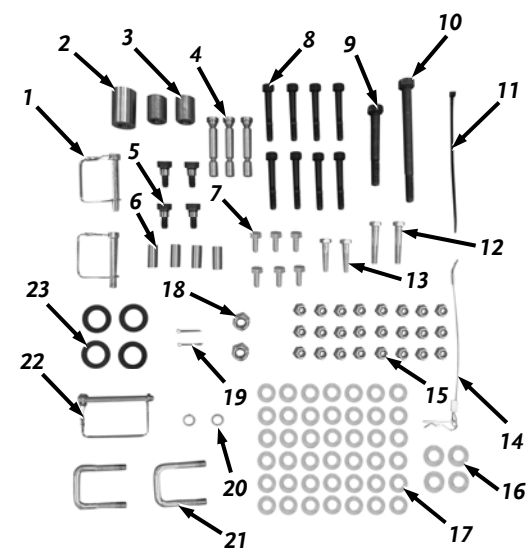


Figure 6

Index#	Part#	Description	Qty
1	21155	Pin, Snap Safety, 3/8" X 2.75"	2
2	36706	Spacer, Tooth Bar	1
3	37186	Spacer, Rail, Center	2
4	37237	Pin, Shear, 1/2"	3*
5	36737	Bolt Shoulder, 1/2 X 3/8!, 3/8-16	4
6	36702	Spacer, Rail	4
7	37239	Bolt, HHCS, 3/8-16 X .75", GR5, ZP	6
8	16484	Bolt, HCS, 3/8-16 X 2.5", GR5, ZP	8
9	37243	Bolt, HHCS, 1/2-13 X 3-3/4", GR8	1
10	37242	Bolt, HHCS, 1/2-13 X 6", GR8, ZP	1
11	12797	Cable Tie, 17", Nylon Black	1
12	12686	Bolt, HCS, 3/8-16 X 2", GR5, ZP	2
13	11985	Bolt, HCS, 3/8-16 X 1-1/2", GR5, ZP	2
14	37236	Lanyard, Hair Pin	1
15	16413	Nut, Nylon Lock, 3/8-16, Low Profile	24
16	23499	Washer, SAE Flat, 1/2", ZP	4
17	12170	Washer, Flat 3/8", ZP, ANSI Narrow	42
18	11072	Nut, Nylon Lock, 1/2-13, GR5, ZP	2
19	37190	Pin, Cotter, 3/32" x 1", ZP	2
20	18081	Washer, Lock, Medium Split, 3/8"	2
21	36680	U-bolt, Post	2
22	37191	Pin, Snap Safety, 5/16" x 3"	1
23	18064	Washer, .8" ID, 1.5" OD X .11"	4

* Two Shear Pins are spares

Assembly

This assembly section is written for machines with flange Bolts and Locknuts. The flange performs the same function as a flat Washer so a Washer is not needed next to the flange.

For machines with regular Hex (Non-flanged) hardware, a washer must be added under the regular hex Bolt Heads and under the Locknuts.

Tools Needed

- Two 9/16" Wrenches
- Two 3/4" Wrenches
- Two 13mm Wrenches
- 1/4" Allen Wrench
- Ratchet, Extension and 9/16" Socket
- Pliers

1. Locate a clean flat surface to assemble the Power Grader.
2. Position the Frame Assembly with the front facing up to gain access to the Tooth Bar area (**Figure 7**).

Note: The Weight Box Straps are secured at the ends but not at the center of the machine. You may need to loosen the hardware before performing the next step.

3. Rotate the Weight Box Straps to align with the mounting holes in the forward Frame Crossmember and secure with two 3/8-16 x .75 Flange Bolts and Locknuts using two 9/16" Wrenches. Tighten hardware on the other end of the Weight Box Straps also.
4. Support the Tooth Bar as you remove the four Bolts and Locknuts that are securing the Tooth Bar using two 9/16" Wrenches (**Figure 8**).
5. Turn the Tooth Bar around so the teeth are facing forward (**Figure 9**). Secure the Tooth bar with the four Bolts and Locknuts but only hand tight for now.
6. Flip the Frame Assembly over so the front of the Frame Assembly is facing forward and both Crossmembers are on top (**Figure 10**).
7. Remove the top Bolt and Locknut that is securing the Mold Board using two 9/16" Wrenches (**Figure 11**).
8. Loosen the bottom Bolt and Locknut that is securing the Mold Board using two 9/16" Wrenches and rotate the Mold Board down to make room for the Tow Bar installation in the next step.
9. Position the Tow Bar under the Crossmembers with the Shear Pin Label on top and toward the front (**Figure 10**).

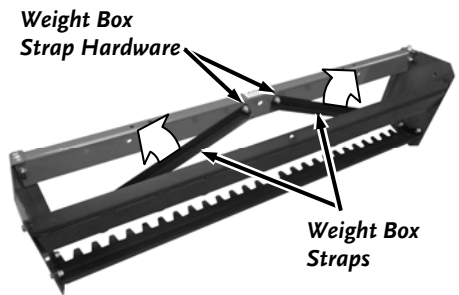


Figure 7

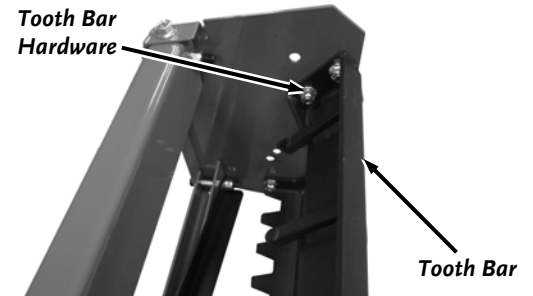


Figure 8

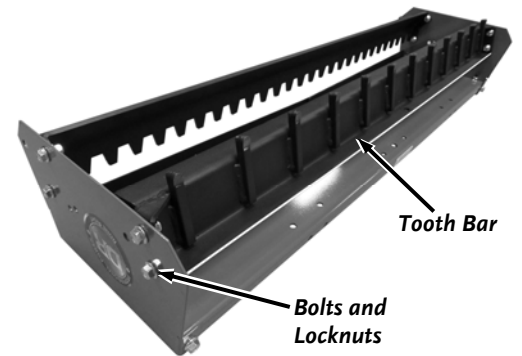


Figure 9

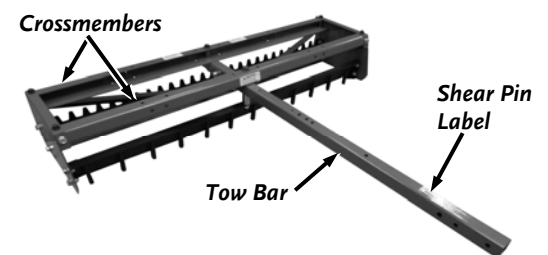


Figure 10

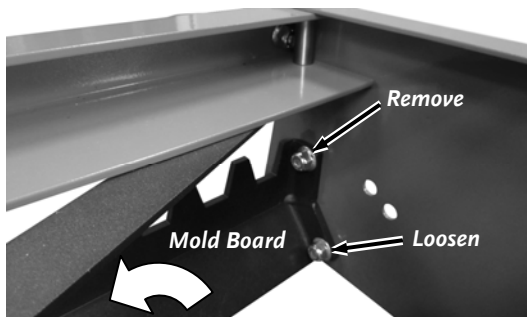


Figure 11

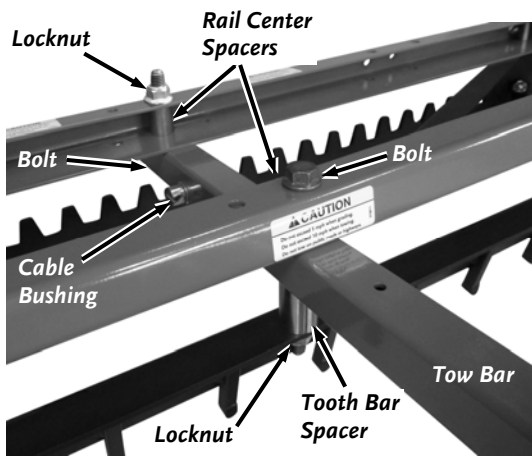


Figure 12

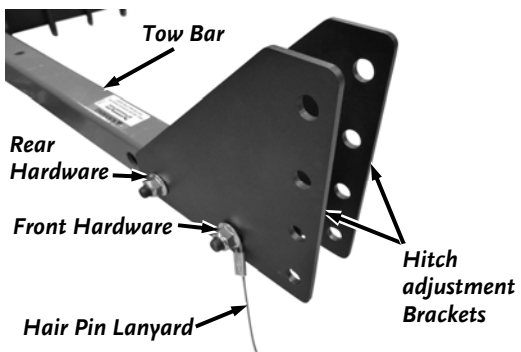


Figure 13

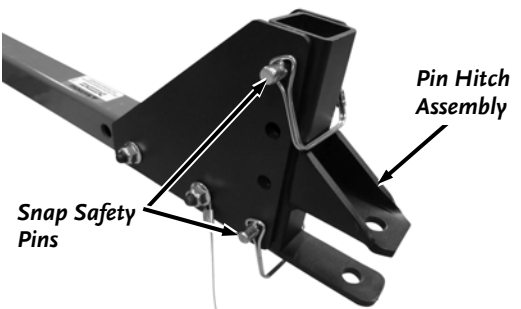


Figure 14

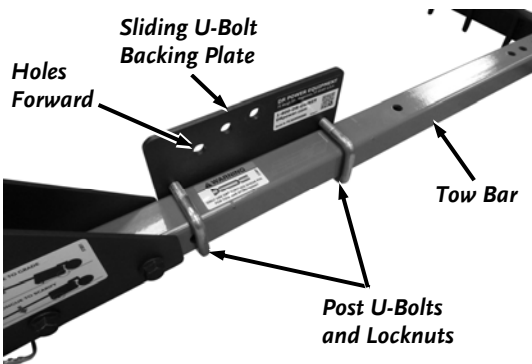


Figure 15

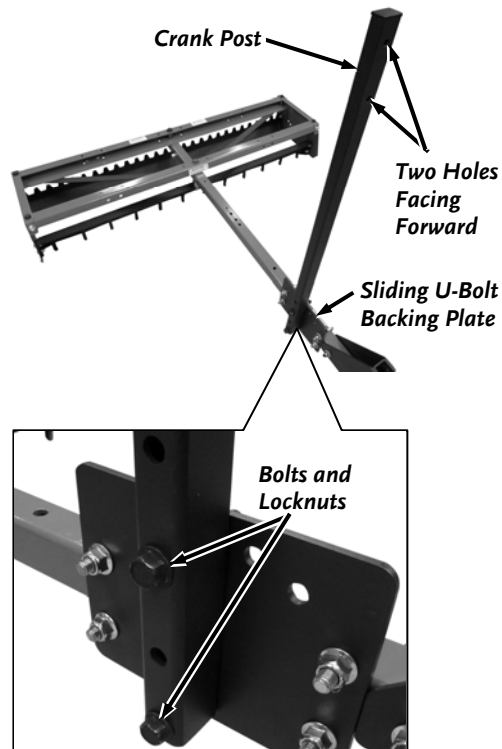


Figure 16

10. Secure the front of the Tow Bar with a 1/2-13 x 6" flange Bolt, Rail Center Spacer (inserted into Crossmember), Tooth Bar Spacer (between Tow Bar and Tooth Bar) and 1/2" flange Locknut only hand tight for now (**Figure 12**).
11. Secure the rear of the Tow Bar with a 1/2-13 x 3-3/4" flange Bolt, Rail Center Spacer (inserted into Crossmember) and 1/2" flange Locknut and tighten with two 3/4" Wrenches.
12. Tighten the Hardware you installed in step 6 with Two 3/4" Wrenches.
Note: The 1/2" Bolt and Locknut that you tightened in step 11 and 12 should be very tight so the parts are compressed together for strength.
13. Tighten the Hardware you installed in step 5 with Two 9/16" Wrenches.
14. Install the two Hitch Adjustment Brackets with a 3/8-16 x 2-1/2" flange Bolt, Locknut and Hair Pin Lanyard at the forward location using two 9/16" Wrenches (**Figure 13**). Secure the rear location with a 3/8-16 x 2-1/2" Bolt and Locknut using two 9/16" Wrenches.
15. Position the Pin Hitch Assembly between the Hitch Adjustment Brackets and secure with two Snap Safety Pins (**Figure 14**).
16. Secure the Sliding U-Bolt Backing Plate to the right side of the Tow Bar (three holes facing forward) with two Post U-Bolts and four 3/8" flange Locknuts using a 9/16" Wrench. Do not over tighten (**Figure 15**).
17. Install the Crank Post onto the Sliding U-Bolt Backing Plate with two 3/8-16 x 2-1/2" flange Bolts and Locknuts using two 9/16" Wrenches (**Figure 16**).
Note: The other two holes at bottom of the Crank Post can be used for height adjustment as described in the "Crank Post Adjustment" section at the end of this Chapter.

18. Attach the Height Adjust Control Box to the Crank Post with two 3/8-16 x 1-1/2" Bolts, Lock Washers and Flat Washers using a 9/16" Wrench (**Figure 17**).
19. Secure the back side of the two Axle Brackets to the rear Crossmember with two 3/8-16X 3/4" flange Bolts and Locknuts using a Ratchet, Extension and 9/16" Socket on the inside and a 9/16" Wrench on the inside (**Figure 18**).
20. Secure the top of the Axle Brackets with two 3/8-16X2-1/2" flange Bolts, Rail Spacers (inserted into crossmember) and flange Locknuts using two 9/16" Wrenches.
21. Install a 1/2" X 3/8"L, 3/8-16 Shoulder Bolt (head facing out) and flange Locknut to the left side Axle Bracket using a 1/4" Allen Wrench and 9/16" Wrench (**Figure 19**).
22. Repeat step 21 for the right side Axle Bracket with the Shoulder Bolt facing out to the right side.
23. Position the Axle Assembly on the outside of the Axle Brackets (**Figure 20**). Align the top holes of the Axle Brackets to the holes in the Axle Assembly and secure with 1/2" X 3/8"L, 3/8-16 Shoulder Bolts (head facing out) and flange Locknuts using a 1/4" Allen Wrench and 9/16" Wrench.
24. Place a .8" ID, 1.5" OD x .11" Washer onto both ends of the Axle Assembly.
25. Install a Wheel and .8" ID, 1.5" OD x .11" Washer on each end of the Axle and secure with a Cotter Pin using Pliers to bend the ends (**Figure 21**).

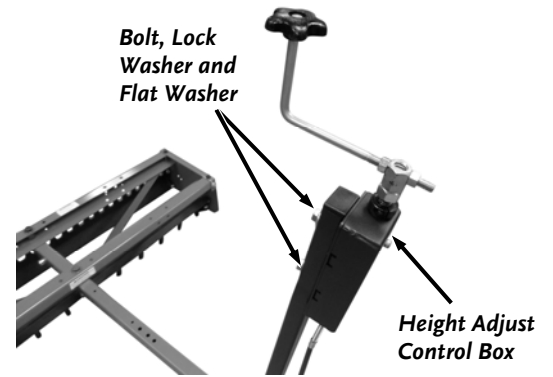


Figure 17

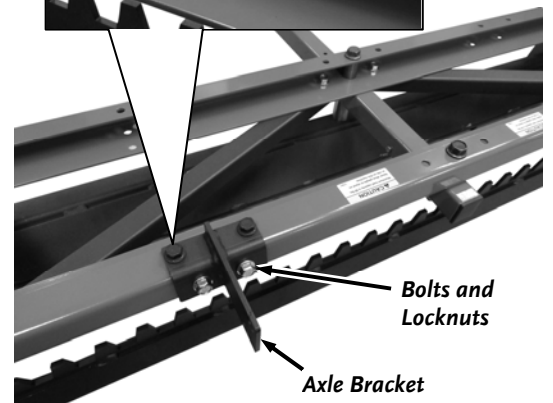
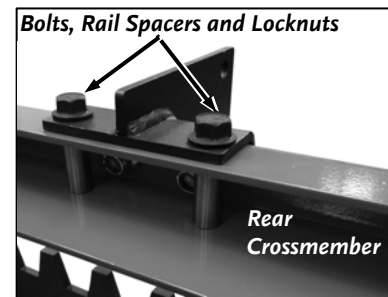


Figure 18

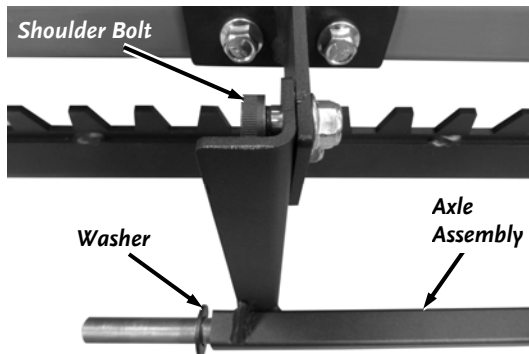


Figure 20

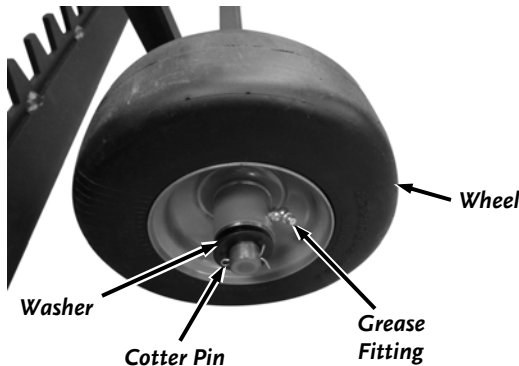


Figure 21

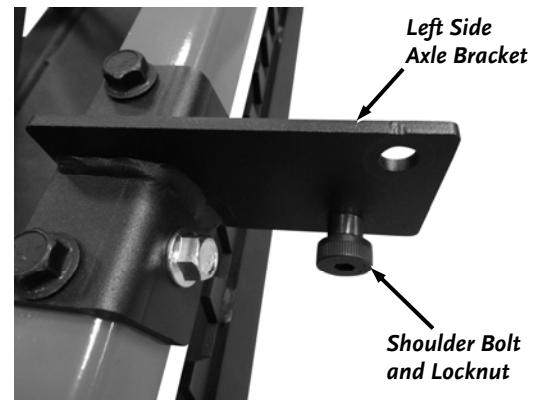


Figure 19

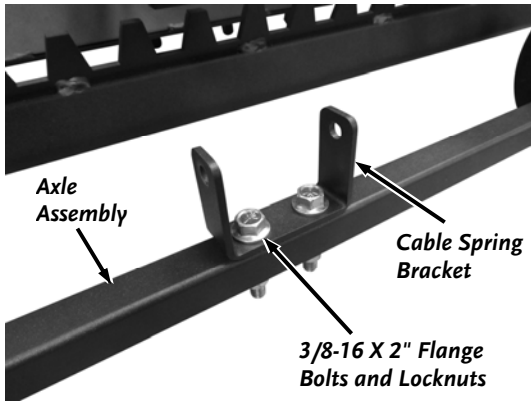


Figure 22

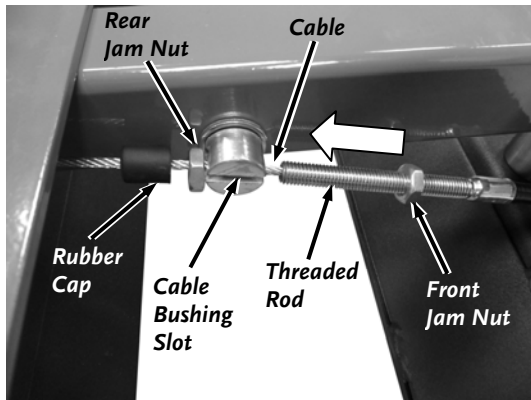


Figure 23

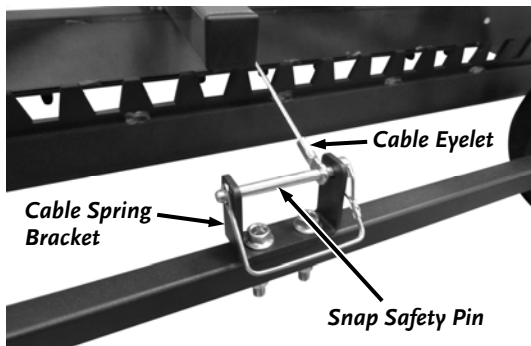


Figure 24

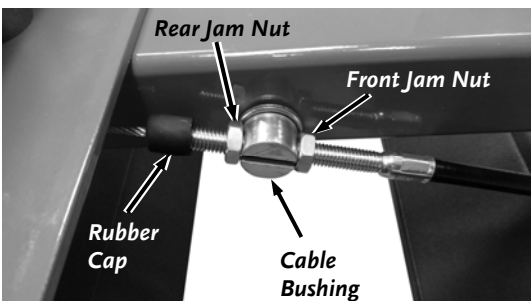


Figure 25

26. Install the Cable Spring Bracket onto the Axle Assembly with two 3/8-16 X 2" flange Bolts and Locknuts using two 9/16" Wrenches (**Figure 22**).
27. Insert the Height Adjust Cable under the front Crossmembers a position it near the Cable Bushing (**Figure 23**).
28. Pull the Rubber Cap from the threaded Rod of the Cable Assembly and unscrew the rear Jam Nut to remove it from the Threaded Rod.
29. Position the Cable into the Bushing slot and push the Threaded Rod into the Bushing hole.
30. Adjust the front Jam Nut that is still on the Threaded Rod until the Eyelet at the eyelet end of the Cable can be secured to the Cable Spring Bracket with the 5/16" X 3" Snap Safety Pin (**Figure 24**).
31. Reinstall the Jam Nut and secure the Cable to the Bushing by tightening the two Jam Nuts against the Bushing using two 9/16" Wrenches (**Figure 25**).
32. Reposition the Rubber Cap onto the end of the Threaded Rod.
33. Secure the Cable to the Tow Bar using the Cable Tie (**Figure 26**).

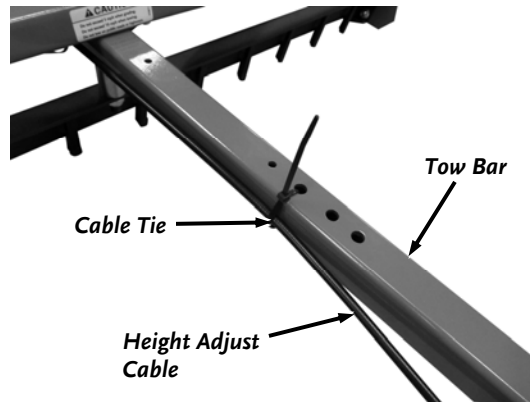


Figure 26

Installing the Tow Hook Hitch (Ball Hitch Towing)

1. Insert the square portion of the Tow Hook Hitch into the opening of the Tow Bar Hitch (**Figure 27**).
2. Insert the Shear Pin down through the Tow Bar Hitch and Tow Hook Hitch.
3. Place the Tow Hook Anti Rotation Bracket under the Tow Bar Hitch with the hole over the bottom of the Shear Pin (**Figure 28**).
4. Insert the Hair Pin that is attached to the Lanyard, into the Shear Pin hole to secure.

Connecting the DR POWER GRADER to your Tow Vehicle

The following procedure is for connecting the DR POWER GRADER to your Tow Bar (Tractor) or Ball Hitch (ATV) configuration.

NOTICE

- Use only the shear pin provided; use of any other Shear Pin or bolt may cause damage to your DR Power Grader.
- There are two extra shear pins provided. Store one with your Operators manual in a safe location and keep one with you when grading.

Lawn Tractor: (Tow Bar Hitch)

1. Stop the Lawn Tractor Engine and set the Parking Brake on your Lawn Tractor.
2. Lift the Tow Bar and position the Tow Bar Hitch opening onto the Lawn Tractor Hitch Plate (**Figure 29**).
3. Align the hole in the center of the Hitch Plate on your Lawn Tractor with the holes in the Tow Bar Hitch. Insert the Shear Pin and secure it with the Hair Pin Lanyard.

ATV: (Tow Hook Hitch)

1. Stop the ATV engine, put the transmission in 1st gear and set the Parking Brake on your ATV
2. Lift the Tow Bar and position the Tow Hook Hitch over the Hitch Ball on the ATV (**Figure 30**). Pull back on the Power Grader so the slot in the Keyhole Hitch fits around the Hitch Ball Shaft.

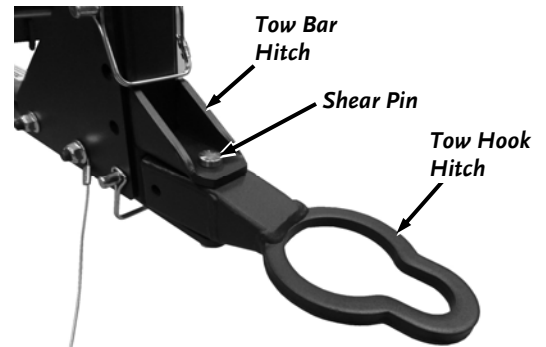


Figure 27

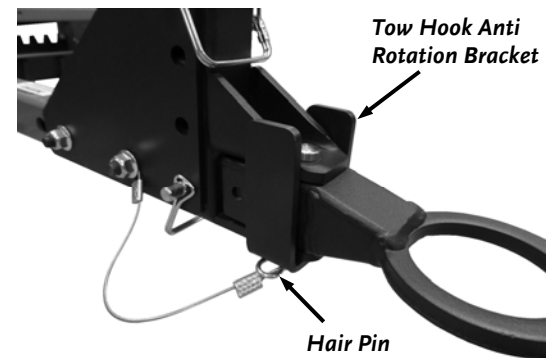


Figure 28

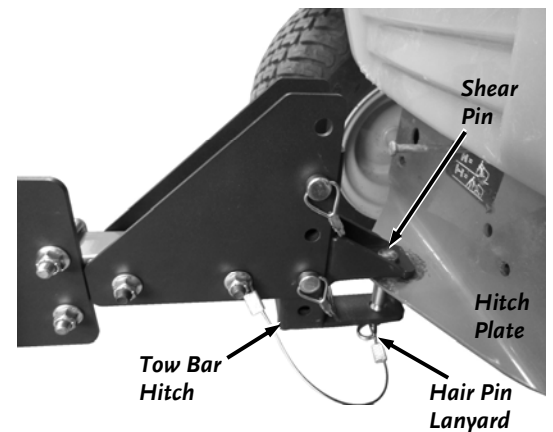


Figure 29

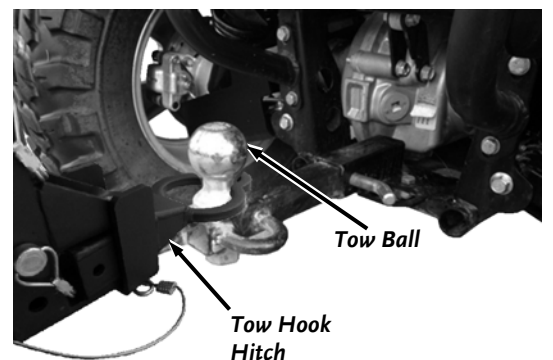


Figure 30

Crank Post Adjustment

The Crank Post can be adjusted to fit the Lawn Tractor or All Terrain Vehicle you will be using to tow the Power Grader. The Post can be moved forward or back on the Tow Bar as needed so the operator has easy access and no part of the Tow Vehicle will contact the Grader while turning. The angle/height of the Crank post can be adjusted for better operator access.

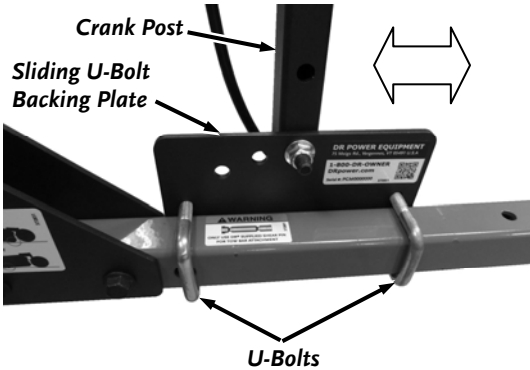


Figure 31

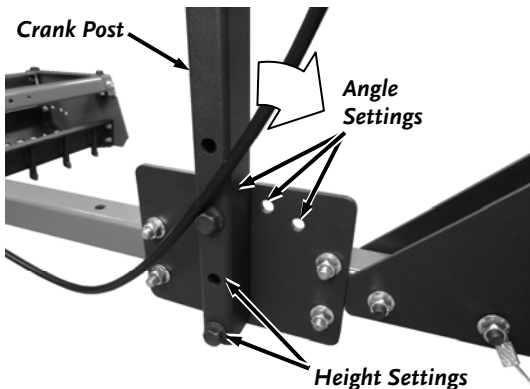


Figure 32

SETTING CRANK POST DISTANCE FROM TOW HITCH

Tools Needed:

- 9/16" Wrench

1. Loosen the Locknuts that secure the U-Bolts using a 9/16" Wrench (**Figure 31**).
2. Move the Sliding U-Bolt Backing Plate to a position where it will not contact any part of the Tow Vehicle while turning.
3. Retighten The U-Bolt Locknuts.

SETTING CRANK POST ANGLE/HEIGHT

Tools Needed:

- Two 9/16" Wrenches

Angle:

1. Remove the upper hardware that secures the Crank Post to the Backing Plate and loosen the lower hardware using two 9/16" Wrenches (**Figure 32**).
2. Align the holes at the desired angle position and reinstall the upper hardware and tighten the lower hardware.

Height:

1. Remove the hardware that secures the Crank Post to the Backing Plate and using two 9/16" Wrenches (**Figure 32**).
2. Align the holes at the other height position and reinstall the hardware.

Chapter 3: Operating The DR POWER GRADER

It may be helpful to better familiarize yourself with the features of your Grader by reviewing **Figure 2** in Chapter 2 before beginning the steps outlined in this chapter.

Operating Safety

WARNING

- Never allow anyone to operate the DR Power Grader without first reading and understanding all instructions in this manual. Be thoroughly familiar with the controls and the proper use of your Grader before using.
 - Never let people ride on the Grader.
 - **Always check for objects in the Grader's path before moving.**
 - When operating in a roadway, we suggest that you put out obstructions (marker cones or pails) to divert any traffic away from your work area. Always be aware of potential traffic hazards.
-

Operating Parameters

There are four different types of tow vehicles recommended for the DR POWER GRADER. Each vehicle type has specific strengths, weaknesses, and operating parameters when used with the DR POWER GRADER.

- **Garden Tractor/Lawn Tractor**
 - 14 HP and/or 400-pound tractor minimum for the 48" Model.
 - 5° slopes or less.
 - Material loosened during grading increases traction difficulties.
 - Very good speed control and turning radius.
 - Frequent Scarifying Teeth adjustment may be necessary to maintain traction
 - Forward motion of the DR POWER GRADER may need to be initiated before ground contact.
- **ATV**
 - Traction issues are less evident.
 - More difficult to maintain a consistent speed of less than 5 MPH.
 - Turning radius is large (best used for large, straight drives).
- **UTV**
 - Traction issues are less evident.
 - More difficult to maintain a consistent speed of less than 5 MPH.
 - Turning radius is large (best used for large, straight drives).
 - The tailgate should be lowered for best visibility.
- **Utility Tractor**
 - Traction is excellent.
 - Visibility is very good.
 - With the increased power, the chance of accidentally damaging the DR POWER GRADER's frame is increased. The towing speed **MUST** be kept less than 5 MPH.
 - Extend the Tow Bar to the longest setting when using the DR POWER GRADER with a Utility Tractor.
- **Not for use with Truck or Car**
 - Do not use these types of vehicles; the DR POWER GRADER is difficult to see.
 - **NEVER** operate the DR POWER GRADER with a Truck (2WD or 4WD). Use of a Truck will void the DR POWER GRADER Warranty.

Operating Tips

CAUTION

Lower the grader frame completely to the ground surface when transporting on a trailer, parking on a hill, or servicing the grader.

- Use additional weight (up to 80 pounds) by placing two Cinder Blocks between the Crossmembers when grading hard pack to begin scarification.
- Remove any added weight such as Cinder Blocks when the surface material loosens or when experiencing traction difficulties.
- To create a smoother surface in soft materials, the Axle assembly can be positioned on top of the Grader to prevent tire tracks.
- Remove the weights when grading in muddy conditions or sandy soil.
- Expect to make several passes with the DR POWER GRADER to repair a roadway, depending on the condition.
- Avoid filling Pot Holes filled with water, wait until the holes are dry.
- Use the DR POWER GRADER to work the edges of Pot Holes that are more than 4 feet wide to loosen the sides before you begin filling them.
- Avoid large rocks, embedded ledge, cattle guards, or similar obstructions.
- Remove rocks pulled to the surface during grading to provide a better final graded surface.
 - They can catch under the lawn deck (for lawn tractors).
- Once you have adequately scarified the road surface, raise the Scarifying Teeth Plate to allow the Rear Scraper Blade to create a smooth surface.
 - Raise the Tooth Bar Plate out of the ground before turning around or leaving the work area.
- When using a lawn tractor as the tow vehicle, put the lawn mowing deck in the highest setting or just remove the deck to obtain the highest ground clearance.
 - For ease, do your spring grading before re-installing your lawn deck for the summer mowing activity.
- When using the DR POWER GRADER to prepare a seed bed, remove all large debris before grading.
 - Use the Optional Drag Screen to create the best finish in sand or to incorporate seed.
- Use Low Gear when using an ATV as the tow vehicle – Do not exceed 5 MPH while grading.
 - The maximum speed when not grading is 10 MPH.

NOTICE

Frequently check the tightness of the bolts that fasten the Tooth Bar to the frame.

FAQs

Question: Can the DR POWER GRADER create a crown in the road?

Answer: No, but you can maintain a crown in the road by grading each side separately.

Question: Can the DR POWER GRADER ruin the crown in the road?

Answer: Yes, but only if you grade down the centerline of the road.

Question: Can I use my Lawn Tractor in sandy soils?

Answer: Lawn Tractors do not perform as well as an ATV or Utility Tractor in sandy soils.

Question: Why does the Hitch have a Shear Pin?

Answer: The Shear Pin will absorb the shock by breaking if you hit a large rock, ledge, or other obstruction offering some protection to your DR POWER GRADER and Tow Vehicle.

Adjusting the Power Grader for Grading and Scarifying

1. Rotate the Crank Knob counterclockwise until the Slider is at the bottom of the scale to lower the machine and take all of the weight off the Wheels (Figure 33).

2. Remove the

Note: The Wheels must be set fully up off the ground when Grading or Scarifying.

- Adjust the Tow Bar to the highest position for most aggressive grading (Figure 34).
- Adjust the Tow Bar to the lowest position for most aggressive scarifying (Figure 35). See "Adjusting the Mold Board" for other Mold Board settings.
- Use the remaining Tow Bar Hitch mounting positions for varying degrees of Grading and Scarifying.

Using the Mold Board

ADJUSTING THE ANGLE:

The Mold Board angle can be set at three different angles to determine how aggressively it moves and molds the material.

Tools Needed:

- Two 9/16" Wrenches

1. Remove the top Bolt and Locknut on both ends of the Mold Board using two 9/16" Wrenches (Figure 36).
2. Loosen the Bottom Bolt and Locknut using two 9/16" Wrenches so the Mold Board can be rotated.
3. Rotate the Mold Board to align with the holes at the desired setting.
4. Reinstall the top Bolts and locknuts and tighten all hardware.

CONVERTING TO SMOOTH OR GROOVED EDGE:

The Mold Board can be mounted with the straight edge down for basic grading or for creating smoother surfaces in finer materials. It can also be mounted with the grooved edge down for more aggressive grading or for creating grooved surfaces in finer materials.

Tools Needed:

- Two 9/16" Wrenches

1. Fully raise the Wheels (Figure 33) and remove the Snap Safety Pin from the Cable Spring Bracket to rotate the Axle Assembly out of the way (Figure 37).

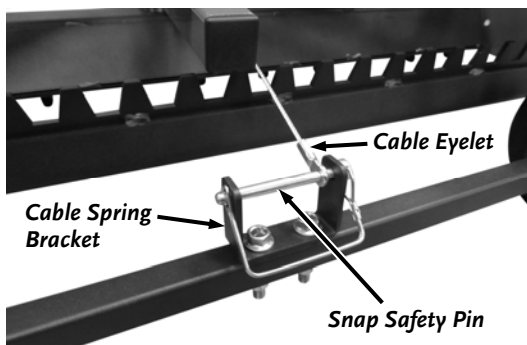


Figure 37

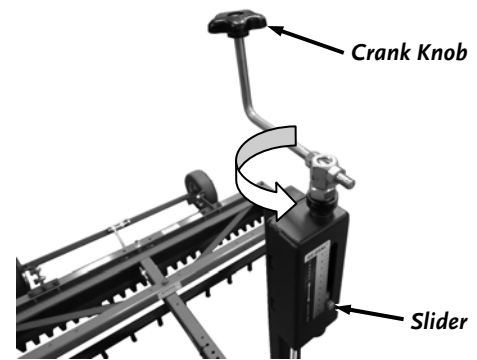


Figure 33

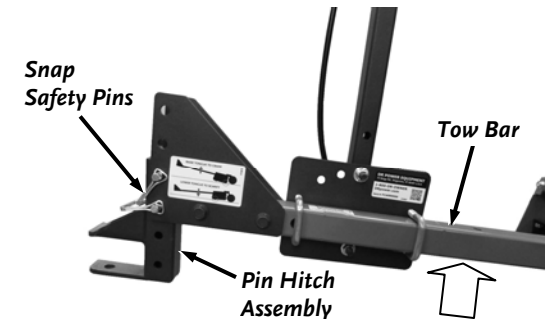


Figure 34

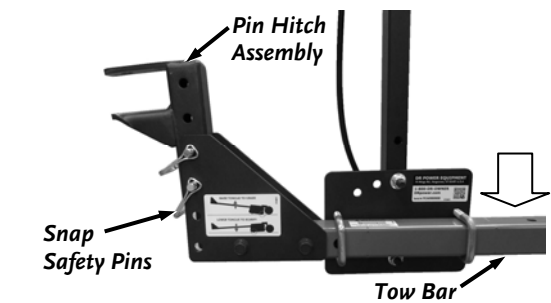


Figure 35

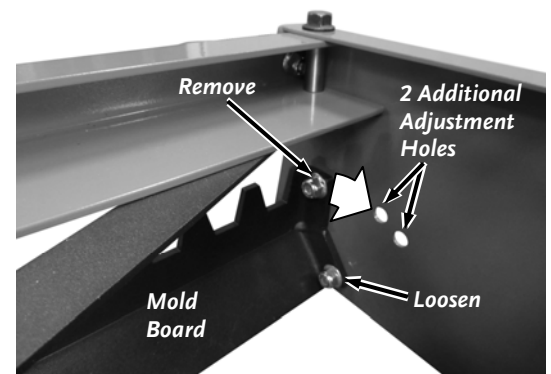


Figure 36

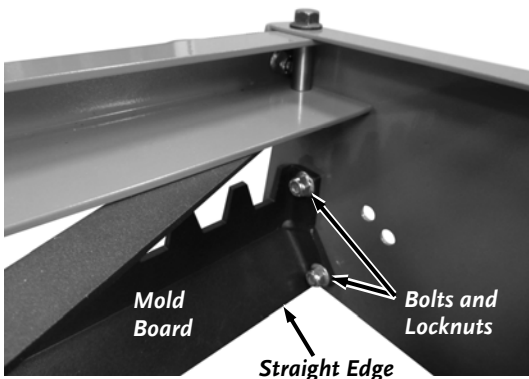


Figure 38

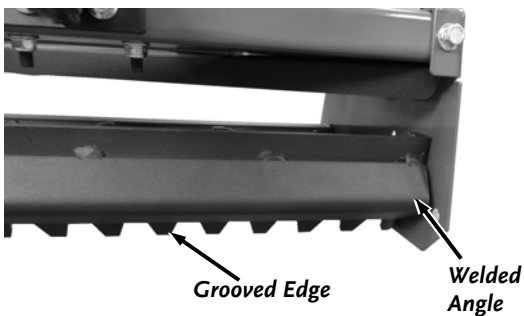


Figure 39

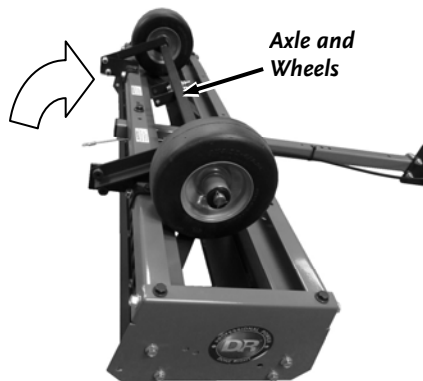


Figure 40

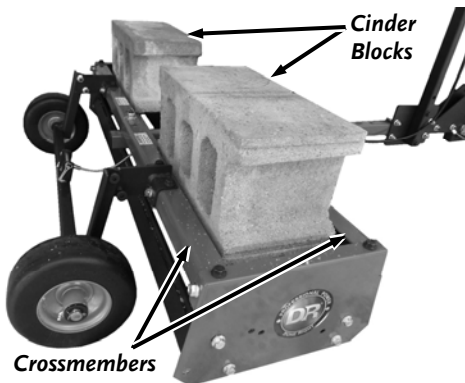


Figure 41

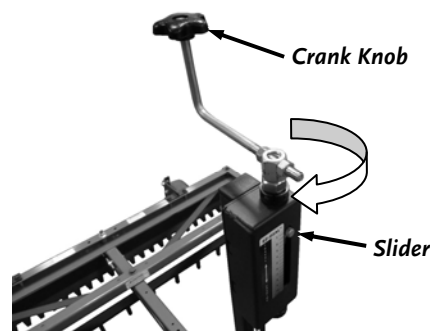


Figure 42

2. Remove the Bolts and Locknuts securing both ends of the Mold Board to the Power Grader Frame using two 9/16" Wrenches (**Figure 38**).

Note: The Mold Board must always be positioned with the welded angle facing toward the rear (**Figure 39**).

3. Remove the Mold Board and position it with the desired edge down and the welded Angle facing the rear of the machine.
4. Reinstall the Mold Board and secure with the Bolts and Locknuts.
5. You can reinstall the Snap Safety Pin (**Figure 37**) so you can raise the Grader when needed or you can rotate the Axle so it is resting on top of the Grader (**Figure 40**) to prevent the Wheels from leaving marks in finer materials.

Note: If you want to place the Axle on top of the Grader, you must strap it to the Grader to keep it in place.

Adding Weight to the Weight Tray

NOTICE

Do not add more than 80 pounds of weight to the Grader. More than 80 pounds could cause damage to the Grader and void the Warranty.

Two Cinder Blocks can be placed between the Crossmembers to add more weight for harder surfaces (**Figure 41**).

Any weights added to the top of the Grader must be strapped to the Crossmembers to prevent them from being bounced off the machine.

Lowering the Wheels for transporting

1. Rotate the Handle clockwise to raise the Slider to the top of the scale (**Figure 42**). This will lower the Wheels and lift the Power Grader off the ground for transporting.

Optional Drag Screen

An optional Drag Screen is available for your DR POWER GRADER. This heavy-duty, flexible-steel screen attaches easily behind the DR POWER GRADER to break up and smooth any clumps that form as you grade the material.

The Drag Screen is also designed to produce a more highly finished surface when using fine dry materials such as sand and to remove the small lines or ridges sometimes left by the Scarifying Teeth or Grader Wheels during the initial grading process. The Drag Screen is ideal for areas that have high sand or soil content such as new lawns, riding rinks, ball fields, or sandy driveways.

The Drag Screen is also very helpful in seeding large areas. By lifting the Scarifying Teeth and Mold Board of the DR POWER GRADER above the working surface so that only the wheels make contact, the Drag Screen simply and effectively distributes the topsoil uniformly over the seed.

For more information and to order the Optional Drag Screen for your new DR POWER GRADER, contact us at www.DRpower.com or call Toll-Free 1-800-DR-OWNER (376-9637).

Chapter 4: Maintaining The DR POWER GRADER

Regular maintenance is the way to ensure the best performance and long life of your machine. Please refer to this Chapter for maintenance intervals and procedures.

⚠ WARNING

Before performing any maintenance, you must first shut off the tow vehicle, remove the key and set the parking brake.

Regular Maintenance Checklist

PROCEDURE	BEFORE EACH USE	EVERY 25 HOURS
Check general equipment condition e.g., Nuts, Bolts, welds, etc.	▲	
Hose down the DR POWER GRADER	▲	
Check condition of Shear Pin	▲	
Lubricate Wheels as needed		▲

Cleaning the Power Grader

1. Use a Hose or Pressure Washer to clean the DR POWER GRADER to keep the Scarifying Teeth Plate, Wheels etc. clean and clear of debris.

Checking the Shear Pin

1. Check the Shear Pin for signs of wear or damage. Replace the Shear Pin if worn or damaged.

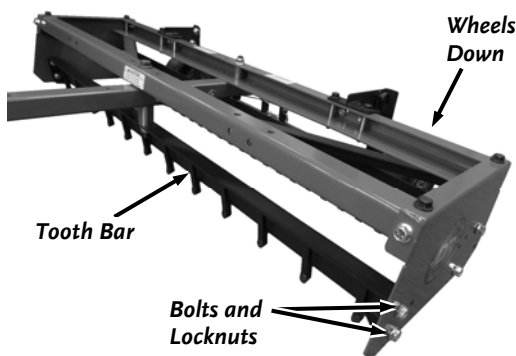


Figure 43



Figure 44

Replacing the Tooth Bar

Tools Needed:

- Two 9/16" Wrenches
1. Use the Height Adjust to lower the Wheels to raise the front of the DR POWER GRADER off the ground.
 2. Remove the Bolts and Locknuts on both ends of the Tooth Bar using two 9/16" Wrenches (**Figure 43**).
 3. Remove the old Tooth Bar and clean the mounting area of the Frame.
 4. Position the new Tooth Bar and secure with the Bolts and Locknuts.

Lubrication

Tools and Supplies Needed:

- Flexible hose grease gun
 - Lithium grease
 - Clean Rags
1. Clean the Grease Fitting with a clean Rag (**Figure 44**).
 2. Lubricate the Wheels at the grease fitting every 25 hours of operation.
- Note:** Pump the grease gun only until you feel slight resistance (2 - 3 pumps).

Chapter 5: Troubleshooting

Most problems are easy to fix. Consult the Troubleshooting Table below for common problems and their solutions. If you continue to experience problems, contact us at www.DRpower.com or call toll-free 1-800-DR-OWNER (376-9637) for support.

WARNING

Before performing any maintenance, you must first shut off the tow vehicle, remove the key and set the parking brake.

Troubleshooting Table

SYMPTOM	POSSIBLE CAUSE
<i>The wheels on the tow vehicle spin during the grading operation.</i>	<ul style="list-style-type: none">⇒ The Scarifying Teeth are set too low, causing too large a section of surface to be removed. Raise the height of the Scarifying Tooth Bar to improve traction.⇒ There is too much weight in the Weight Tray. Remove some of the weight.⇒ The Tow Vehicle is not adequate for your application.
<i>The Scarifying Teeth are not digging properly</i>	<ul style="list-style-type: none">⇒ The angle of the Tow Bar is not set correctly. Adjust the Tow Bar up for better grading or adjust the Tow Bar down for better scarifying.⇒ There is not enough weight for the hardness of the surface material. Add weight (no more than 80 pounds) to the Power Grader to improve performance⇒ The Wheels are adjusted not lifted all the way up. Raise the Wheels completely when grading or scarifying.
<i>The Mold Board cannot be rotated to alternate angle settings</i>	<ul style="list-style-type: none">⇒ The rear Tow Bar 1/2" Bolt is installed wrong. The Bolt head must be under the Crossmember to allow room to rotate the Mold Board.⇒ The lower hardware is too tight. Loosen the lower Bolt and Locknut to allow the Mold Board to rotate during adjustment. Tighten all hardware when angle adjustment is done.


Chapter 6: Parts Lists, Schematic Diagrams and Warranty

Parts List – GRADER BOX ASSEMBLY

NOTE: Part numbers listed are available through DR Power Equipment.

<u>Ref#</u>	<u>Part#</u>	<u>Description</u>	<u>Ref#</u>	<u>Part#</u>	<u>Description</u>
1	37574	Crossmember,Frame, 48" W/ Weight Limit Label	15	18064	Washer, .8" ID, 1.5" OD X .11"
2	37573	Crossmember, Frame, 48" W/ Speed Limit Label	16	36737	Bolt, Shoulder, 1/2 X 3/8, 3/8-16
3	37572	Rail, Frame, Right, W/ Label	17	36739	Bolt, HHCS, Flanged, 3/8-16 x 3/4", Gr5, ZP
4	37571	Rail, Frame, Left, W/ Label	18	36702	Spacer, Rail
5	36713	Tooth Bar, 48"	19	37185	Bolt, HHCS, Flanged, 1/2-13 x 6", Gr8
6	36711	Board, Mold, 48"	20	37187	Bolt, HHCS, Flanged, 1/2-13 x 3-3/4", Gr8
7	36683	Bracket, Axle	21	33335	Nut, Nylon Lock, Flanged, 1/2-13
8	36710	Strap, Weight Box, 48"	22	37190	Pin, Cotter, 3/32" X 1", ZP
9	36706	Spacer, Tooth Bar	23	37186	Spacer, Rail, Center
10	36677	Assembly, Axle,48"	24	37191	Pin, Snap Safety, 5/16" X 3"
11	36689	Bracket, Spring, Cable	25	33350	Bolt, Hex, Flange, 3/8-16 X 2"
12	19147	Wheel, 8", Semi Pneumatic	26	37284	Label, Limit, Weight
13	33333	Nut, Nylon Lock, Flanged, 3/8-16	27	37281	Label, Limit, Speed
14	37184	Bolt,HHCS,Flanged, 3/8-16 x 2-1/2", Gr8	28	34139	Label, DR Logo, 4" Black

Schematic – GRADER BOX ASSEMBLY

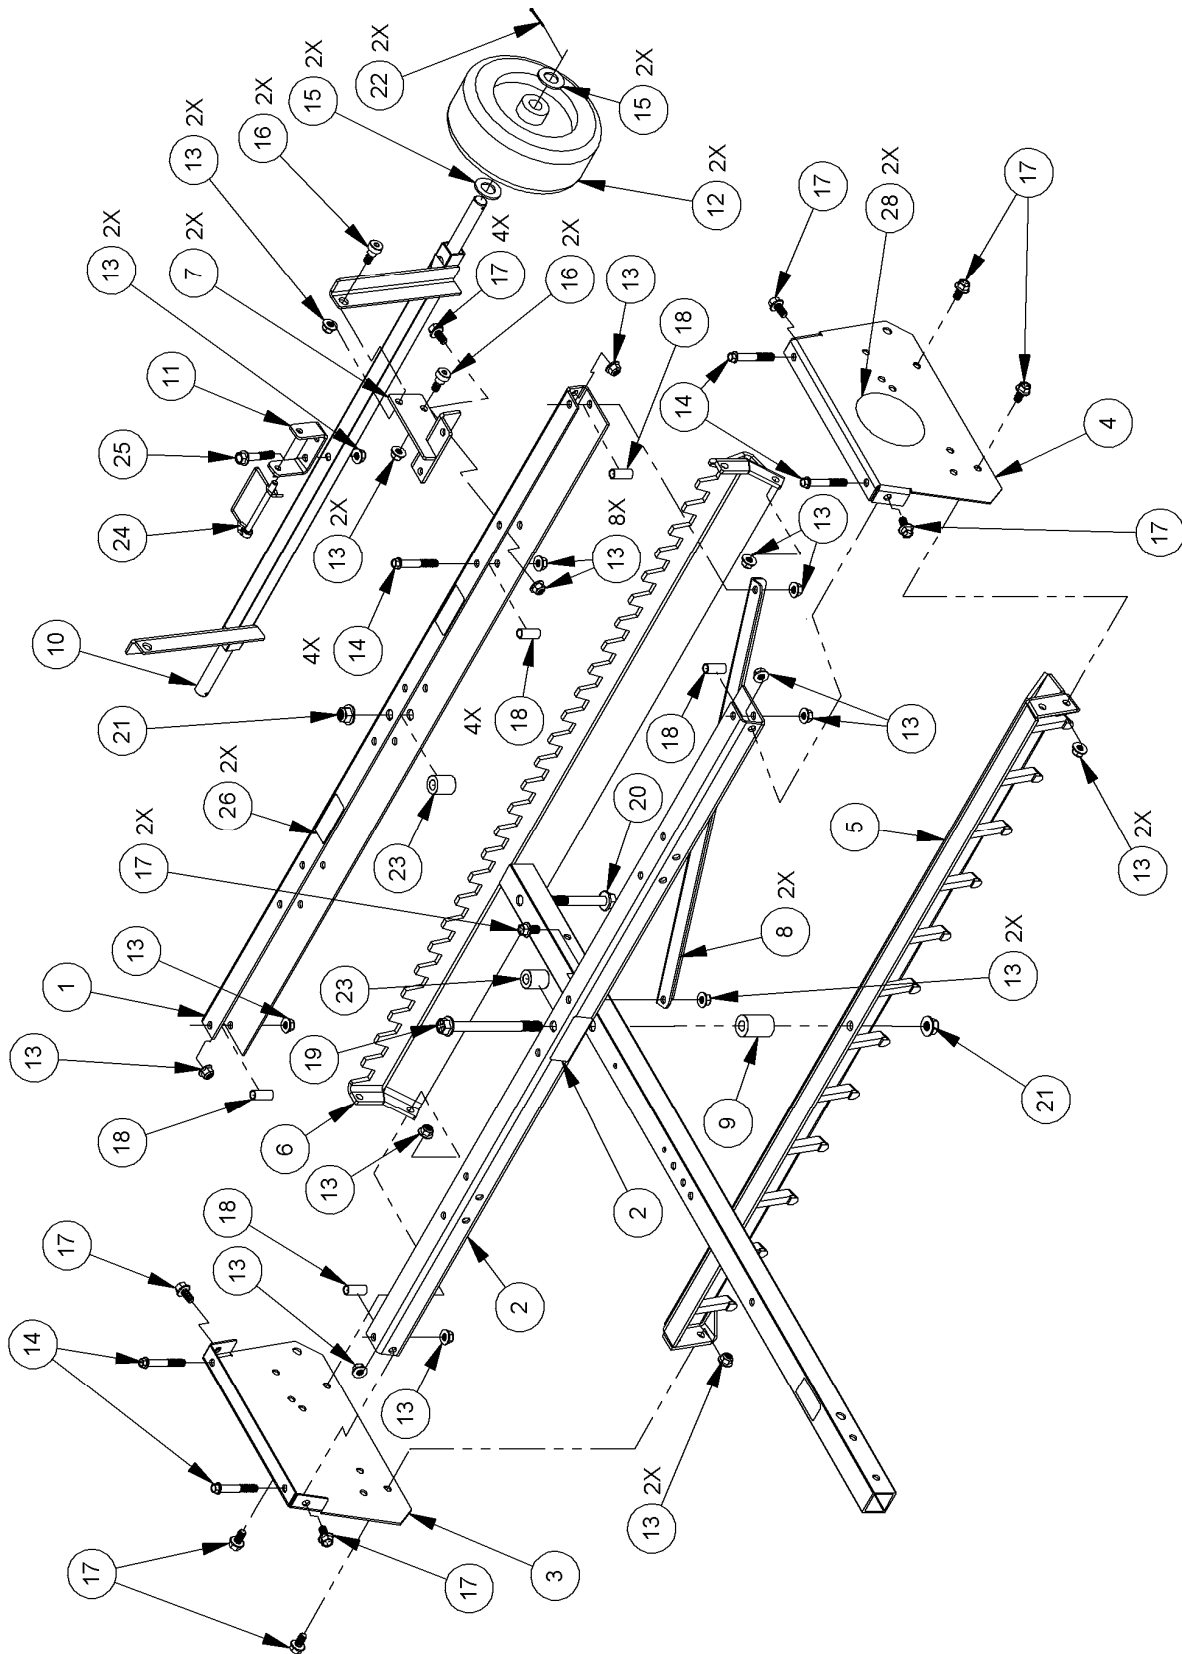


Parts List – TOW BAR ASSEMBLY

NOTE: Part numbers listed are available through DR Power Equipment.

<u>Ref#</u>	<u>Part#</u>	<u>Description</u>	<u>Ref#</u>	<u>Part#</u>	<u>Description</u>
1	37235	Bracket, Hitch Adjustment	13	37236	Lanyard, Hair Pin
2	36676	Assembly, Hitch, Pin	14	37237	Pin, Shear, 1/2"
3	33333	Nut, Nylon Lock, Flanged, 3/8-16	15	37283	Label, Adjust, Hitch
4	36680	U-bolt, Post	16	11985	Bolt, HCS, 3/8-16 X 1-1/2", Gr5, ZP
5	37184	Bolt, HHCS, Flanged, 3/8-16 x 2-1/2", Gr8	17	18081	Washer, Medium Split Lock, 3/8"
6	36704	Cable, Adjust, Height, Manual	18	18759	Plug, Square, 1.5" x 1.5"
7	36685	Post, Crank	19	37505	Plug, Rectangular, 1.5" X 1"
8	12170	Washer, Flat 3/8, ZP, ANSI Narrow	20	37570	Bar, Tow, PGR W/Label
9	36715	Ring, Retaining, External, 3/8"	21	37567	Bracket, Hitch Adjustment, W/Labels
10	36678	Bushing, Cable	22	37569	Plate, Backing, U-bolt, Sliding W/Label
11	36703	Hitch, Tow Hook	23	37280	Label, Pin, Shear
12	37234	Bracket, Anti-Rotation, Hook, Tow			

Schematic – TOW BAR ASSEMBLY

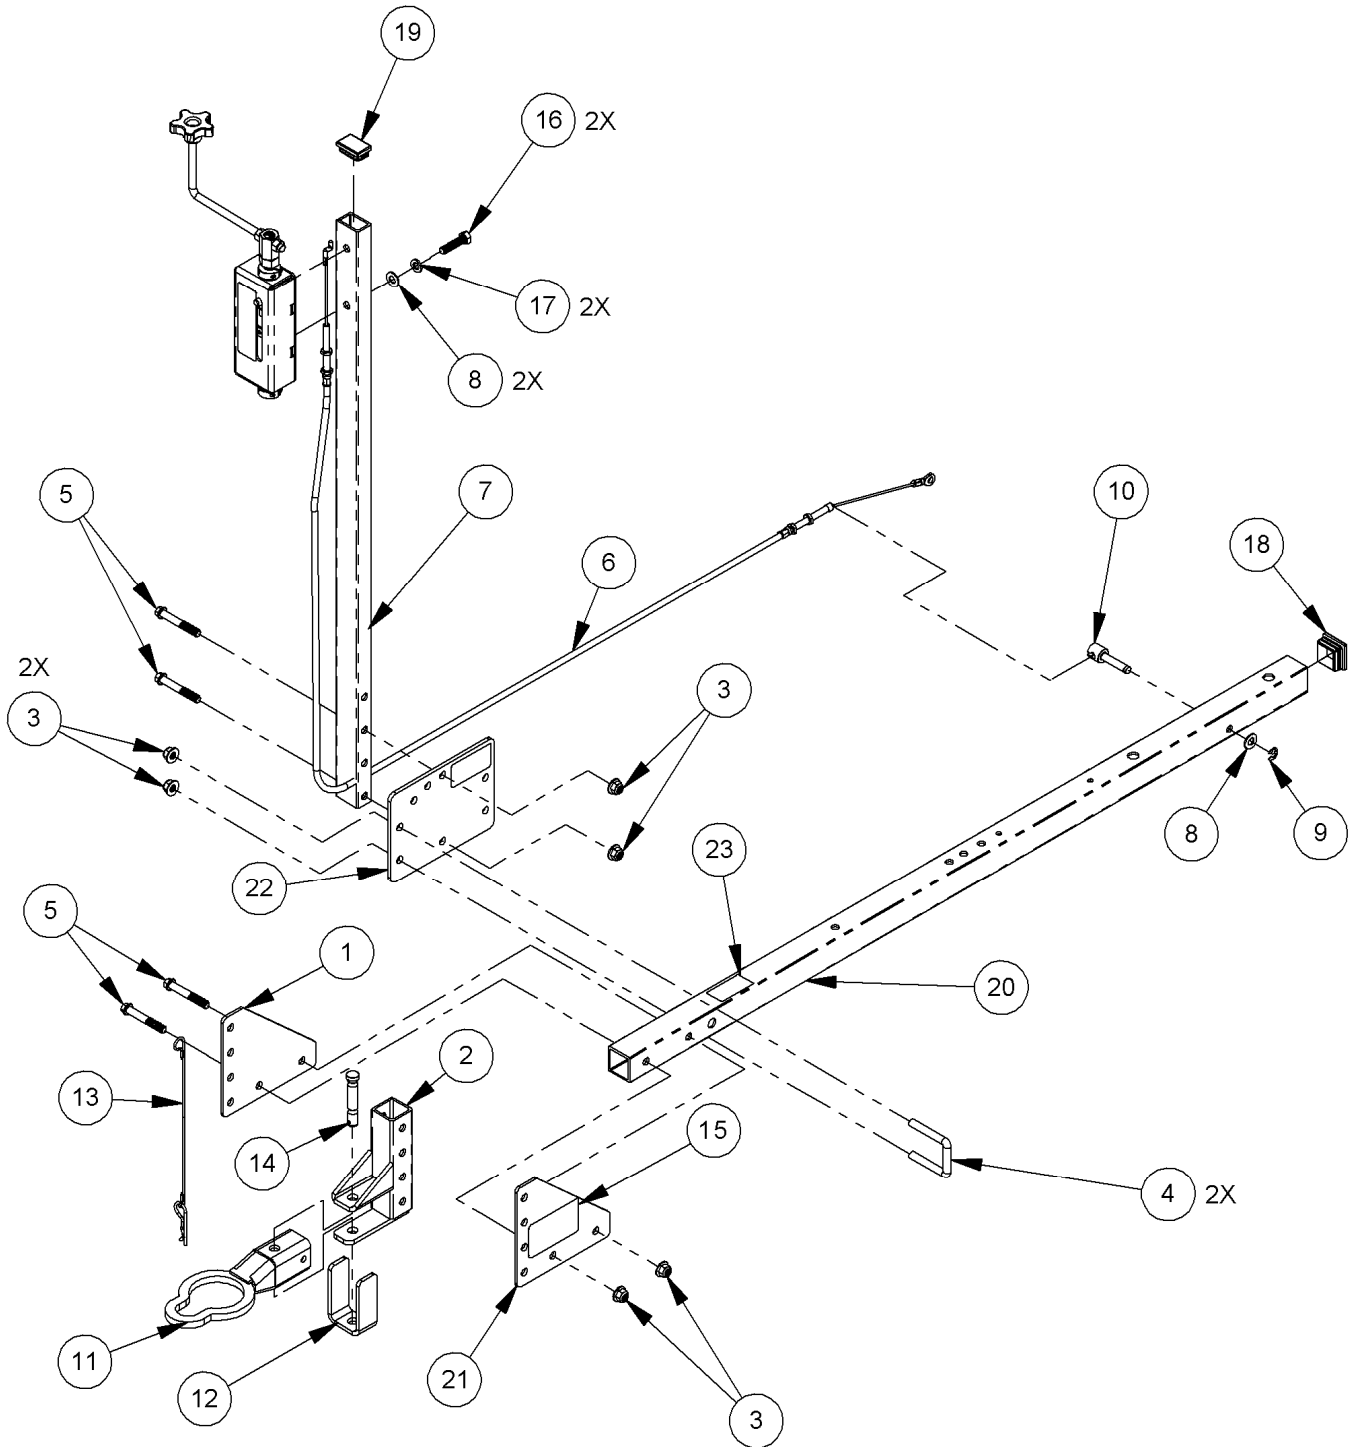


Parts List – CONTROL BOX ASSEMBLY

NOTE: Part numbers listed are available through DR Power Equipment.

<u>Ref#</u>	<u>Part#</u>	<u>Description</u>	<u>Ref#</u>	<u>Part#</u>	<u>Description</u>
1	366561	10-24 X 1/4" Slotted Head, Steel	9	366961	1/2-8, Nut, Coupling, Acme
2	366931	Clamp, Collar, Shaft, 1/2"	10	366911	Cover, Box, Control, Adjust, Height
3	366981	Handle, Crank, Slip Through	11	121701	Washer, Flat 3/8", ZP, Ansi Narrow
4	366871	Bushing, Adjust, Height	12	126831	Nut, 3/8-16, Gr5,ZP
5	375681	Box, Control, Adjust, Height W/Labels	13	367051	Knob, Crank
6	366941	Slider, Adjust, Height	14	372401	Ring, Snap, Retaining, External, 3/8"
7	366901	Rod, Acme, Adjust, Height	15	372411	Washer, Flat, .375" ID, .5" OD
8	366951	1/2-8, Nut, Acme	16	37282	Label, EZ Dial


Parts Schematic – CONTROL BOX ASSEMBLY

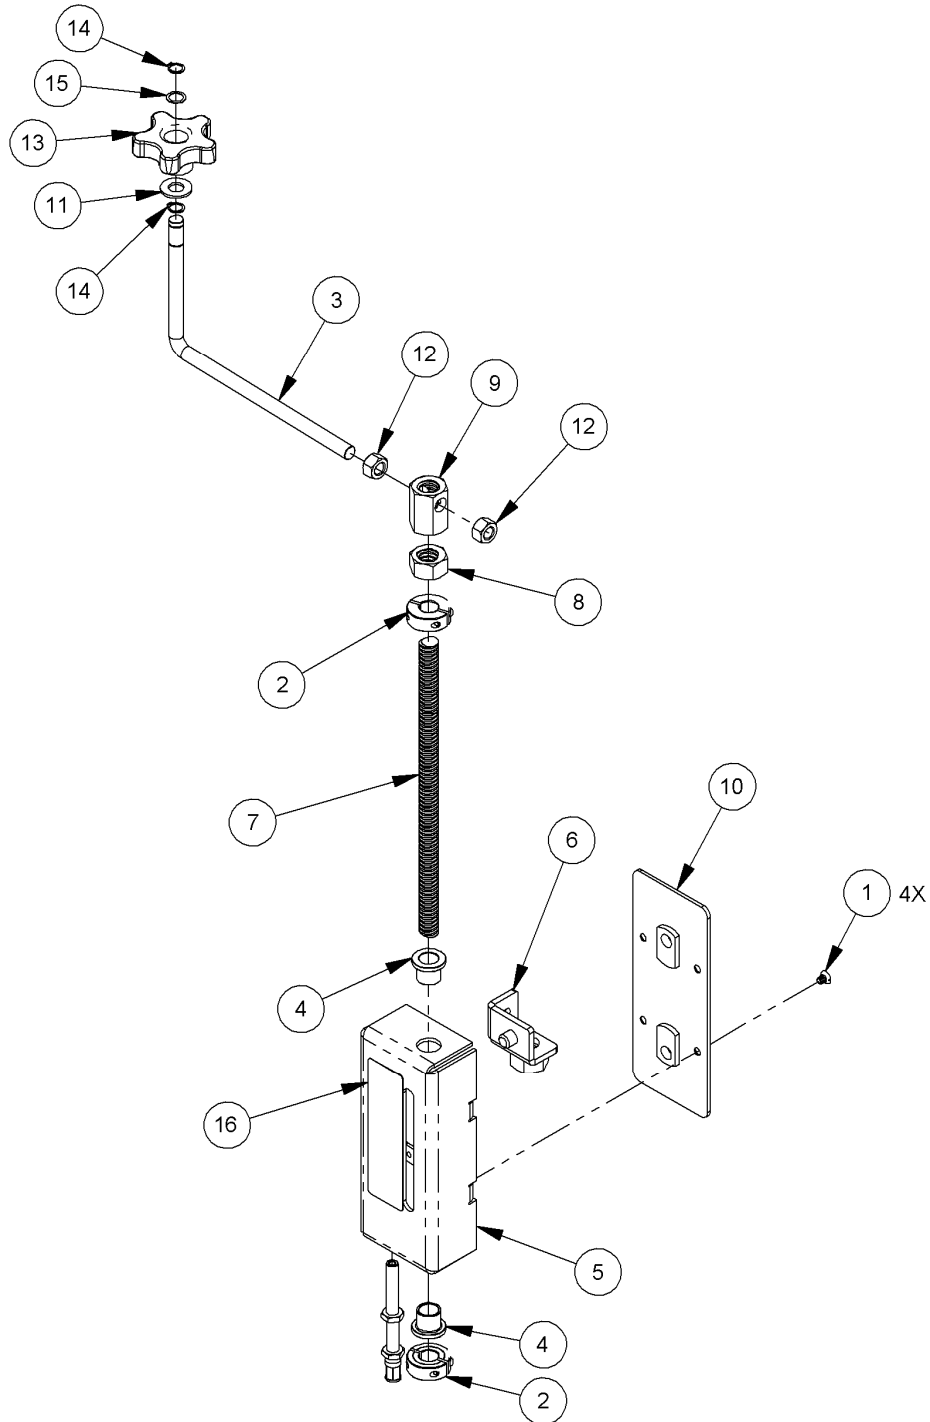

Parts List and Schematic – DR POWER GRADER Optional Drag Screen (Kit No. 210861)

Note: Part numbers listed are available through DR Power Equipment.

Ref#	Part#	Description
01	210861	Drag Screen, 48", w/Chain and Links
02	230991	Snap, Spring, 5/16"
03	211751	Connector, Threaded
04	211771	Chain, Tangle Resistant

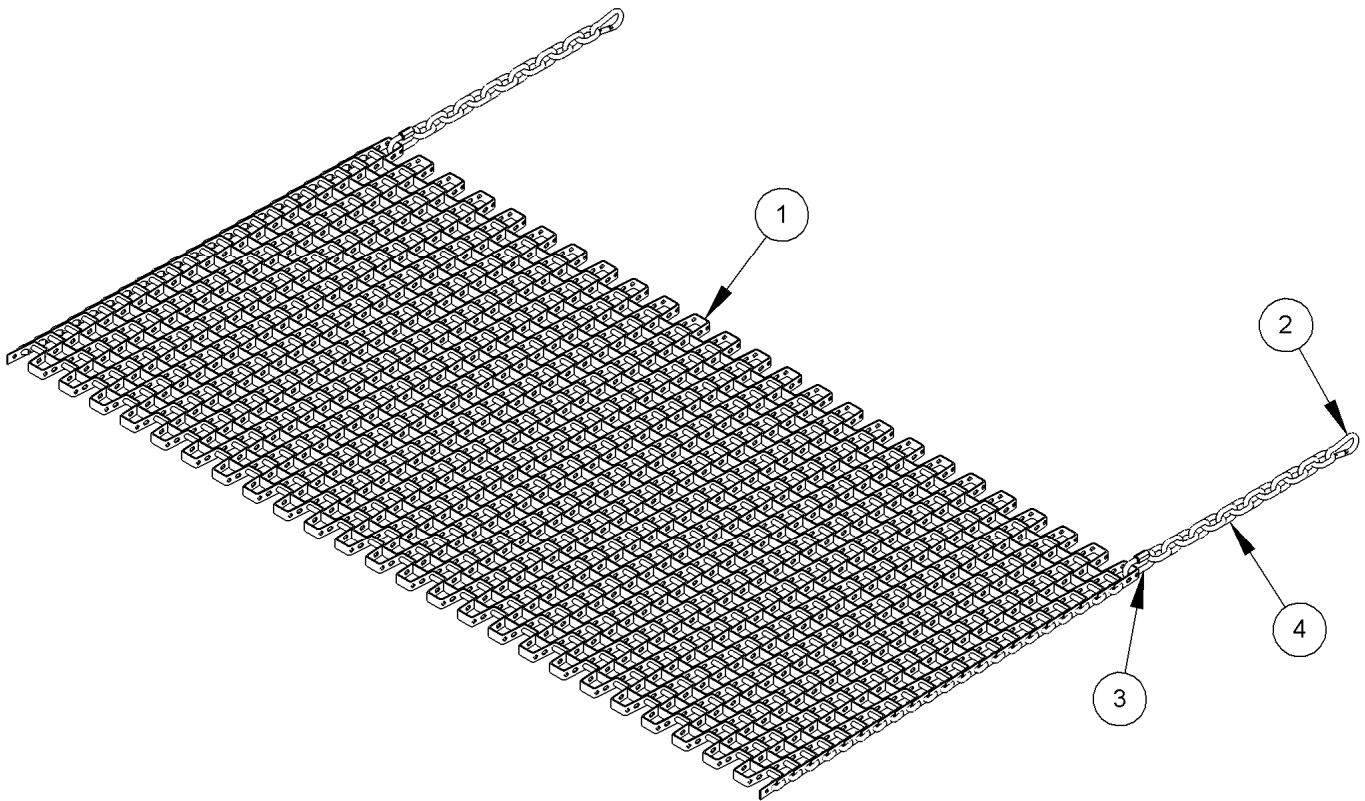

Notes:

Notes:

DR[®] POWER GRADER



2-Year Limited Warranty

Terms and Conditions

The DR[®] POWER GRADER is warranted for two (2) years against defects in materials or workmanship when put to ordinary and normal consumer use; ninety (90) days for any other use.

For the purposes of all the above warranties, "ordinary and normal consumer use" refers to non-commercial residential use and does not include misuse, accidents or damage due to inadequate maintenance.

DR Power Equipment certifies that the DR[®] POWER GRADER is fit for ordinary purposes for which a product of this type is used. DR Power Equipment however, limits the implied warranties of merchantability and fitness in duration to a period of two (2) years in consumer use, ninety (90) days for any other use.

The 2-Year Limited Warranty on the DR[®] POWER GRADER starts on the date the machine ships from our factory. The 2-Year Limited Warranty is applicable only to the original owner.

The warranty holder is responsible for the performance of the required maintenance as defined by the manufacturer's owner's manuals. The warranty holder is responsible for replacement of normally wearing parts such as the Scarifying Teeth, Mold Board and Shear Bolt. Accessories to the machine are not covered by this warranty.

During the warranty period, the warranty holder is responsible for the machine transportation charges, if required. During the warranty period, warranty parts will be shipped by standard method at no charge to the warranty holder. Expedited shipping of warranty parts is the responsibility of the warranty holder.

SOME STATES DO NOT ALLOW LIMITATIONS ON THE LENGTH OF IMPLIED WARRANTIES, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

DR Power Equipment shall not be liable under any circumstances for any **incidental or consequential damages or expenses** of any kind, including, but not limited to, cost of equipment rentals, loss of profit, or cost of hiring services to perform tasks normally performed by the DR[®] POWER GRADER.

SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATIONS MAY NOT APPLY TO YOU.

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU ALSO HAVE OTHER RIGHTS, WHICH VARY FROM STATE TO STATE.

Daily Checklist for the DR POWER GRADER

To help maintain your DR POWER GRADER for optimum performance, we recommend you follow this checklist each time you use your POWER GRADER.

! WARNING

Before performing any maintenance, you must first shut off the tow vehicle, remove the key and set the parking brake.

- [] **HARDWARE:** Check all nuts and bolts to be sure that the components are secure.
- [] **FRAME:** Check all welds to be sure that the frame is intact and secure.
- [] **CLEAN:** Make sure the Tooth Bar and the Frame are clean and free of debris.

End of Season and Storage

! WARNING

Before performing any maintenance, you must first shut off the tow vehicle, remove the key and set the parking brake.

- Hose down the DR POWER GRADER. Remove the Tooth Bar to clean it of debris and then replace it after cleaning the mounting surfaces.
- Lubricate the Rear Wheels.
- Wipe down the DR POWER GRADER to remove any moisture and dirt that may have accumulated.
- If possible, store the Power Grader in a dry, protected place. If it is necessary to store the Power Grader outside, cover it with a protective material.



75 MEIGS ROAD, P.O. BOX 25, VERGENNES, VERMONT 05491